

PicoScope 9201

Sampling Oscilloscope



with 12 GHz analog bandwidth

Introduction



The PicoScope 9201 – a fast PC Sampling Oscilloscope

- ▶ Designed for analysing repetitive signals
- ▶ Uses sequential equivalent-time sampling technology

The instrument provides fast acquisition and repeatable waveform performance analysis with:



- ▶ Automated direct and statistical measurements
- ▶ Markers
- ▶ Histograms
- ▶ Math and FFT analysis
- ▶ Colour-graded display
- ▶ Parametric limit testing
- ▶ Eye diagram measurements
- ▶ Mask template testing

2	input channels
12 GHz	channel bandwidth
10 GHz	trigger bandwidth
16-bit	ADC
5 TS/s	equivalent-time sampling rate
200 fs	time resolution
20 ps/div	fastest timebase
2%	vertical accuracy
0.4%	horizontal accuracy
200 kS/s	acquisition speed



Structure of the PicoScope 9201

The PicoScope 9201 connects to your PC
to give you all the power of a stand-alone instrument

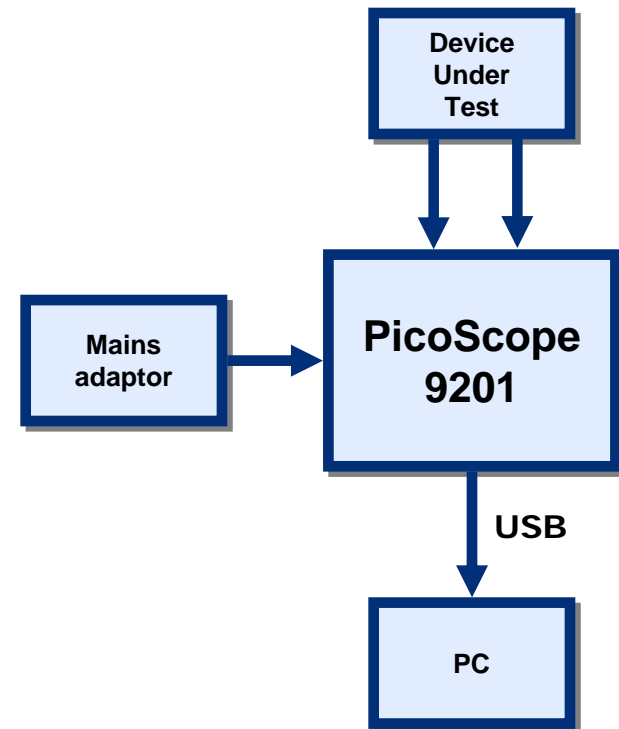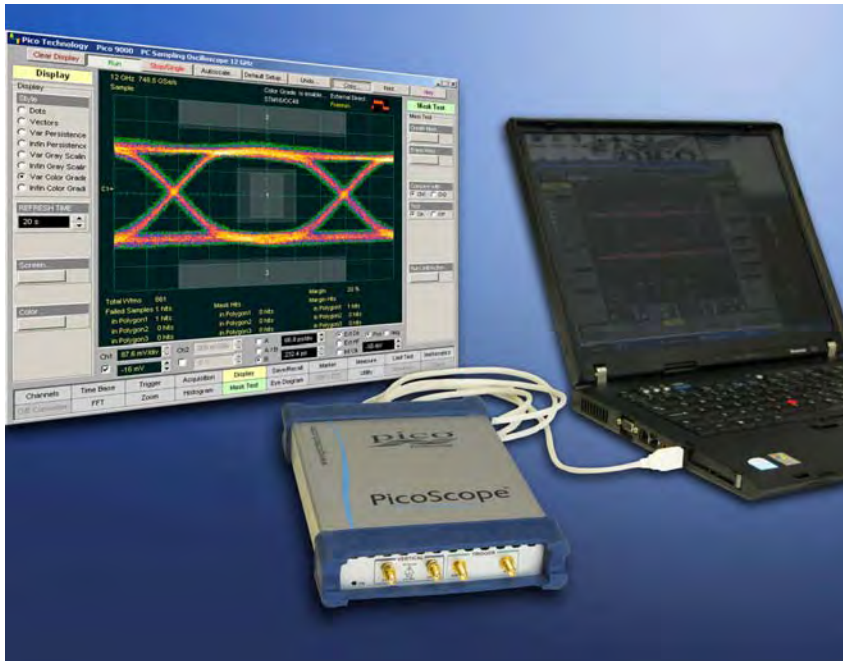

PicoScope 9201 Features



VERTICAL

- ▶ DC to 12 GHz bandwidth
- ▶ 29.2 ps rise time
- ▶ Two channels
- ▶ ± 2 % vertical gain accuracy
- ▶ 16-bit vertical resolution
- ▶ <2.5 mV RMS noise
- ▶ ± 1 V input range

HORIZONTAL

- ▶ Dual timebase 20 ps/div to 2 ms/div
- ▶ 0.4% + 15 ps time interval accuracy
- ▶ <200 fs sampling interval
- ▶ Up to 4 k-point/channel buffer size

TRIGGER

- ▶ DC to 1 GHz full direct trigger
- ▶ 10 GHz prescaled trigger
- ▶ <3.5 ps RMS jitter

OPERATIONAL

- ▶ Power consumption: 15 W max
- ▶ Weight: 1 kg
- ▶ Size: W170 x H40 x D255 mm

DISPLAY, MEASUREMENTS and ANALYSIS

- ▶ Infinite and variable persistence
- ▶ Grey scaling and colour grading
- ▶ High-resolution cursors, automatic waveform measurements, statistics and pass / fail limit tests
- ▶ Waveform processing including FFT with five FFT windows
- ▶ Statistical analysis with time and voltage histograms
- ▶ Automated mask testing with standard and custom masks
- ▶ Eye diagram measurements

UTILITY

- ▶ Autoscale
- ▶ Automatic calibration
- ▶ Windows NT / 2000 / XP
- ▶ Intuitive graphical user interface
- ▶ Built-in information system using Windows Help

PicoScope 9201 Applications



SIGNAL ANALYSIS

- Electrical standards compliance testing
- Spectrum analysis
- Statistical analysis
- Eye-diagram analysis

TIMING ANALYSIS

- Automatic parametric measurements
- Pulsed RF switches
- Compliance testing

R & D

- Microwave & RF characterisation
- High-energy physics
- Digital design
- Informative waveform displays

HIGH-SPEED DIGITAL COMMUNICATIONS

- Design and verification of telecom and datacoms elements
- Manufacturing and testing for ITU / ANSI conformance

SEMICONDUCTOR TESTING

- Microwave & RF characterisation
- High-energy physics
- Digital design
- Informative waveform displays


MANUFACTURING

- Limit and mask testing
- Testing for ITU / ANSI conformance
- Automatic test systems
- Auto-calibration routine

Sequential Sampling

The PicoScope 9201 uses digital sequential sampling technology to acquire and display high-bandwidth waveforms.


A sampling oscilloscope does not continuously monitor the input signal applied to the channel, but looks at it only at discrete points in time. At each point, the oscilloscope samples the signal and stores a replica of the input voltage on an input sampling capacitor.

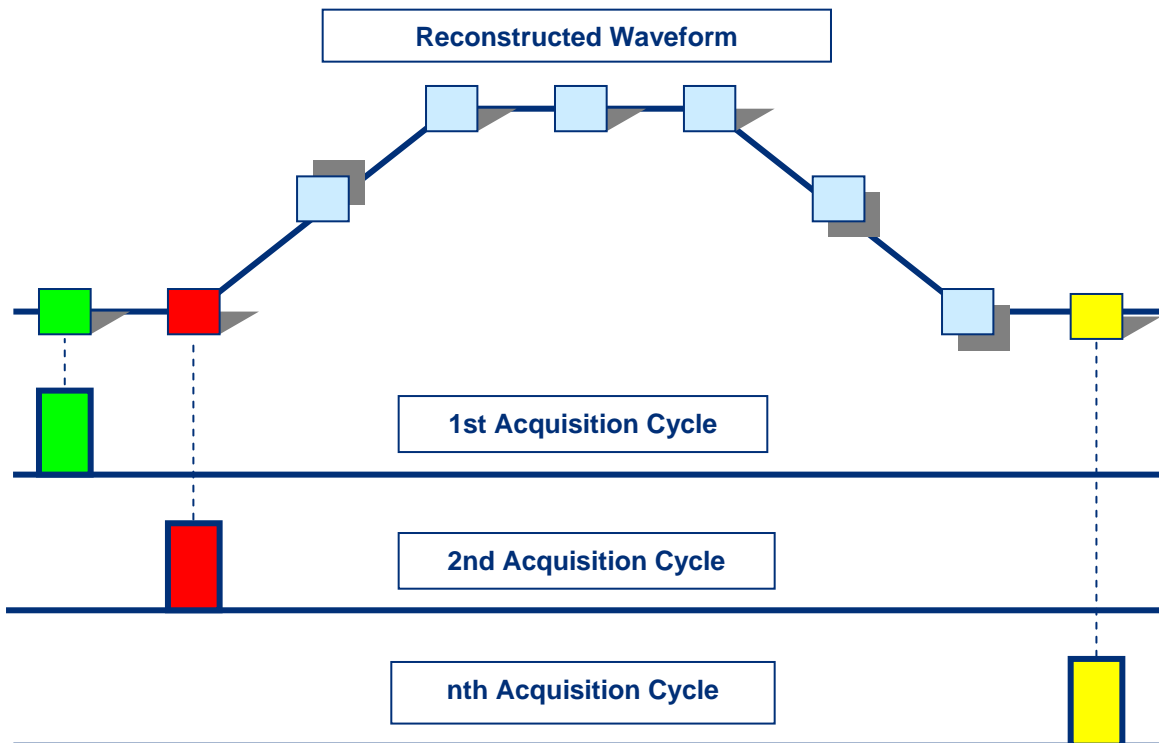

Sequential sampling means:

- ▶ Used with repetitive signals, NRZ or RZ
- ▶ Wide-bandwidth applications (> 10 GHz)
- ▶ One sample is taken for each trigger
- ▶ Multiple trigger events build up waveform
- ▶ No pre-trigger information

The User Interface



The screenshot shows the PicoScope 9000 software interface. At the top, there are system controls like 'Run', 'Stop/Single', and 'Autoscale...'. The main display area shows two waveforms: a yellow sine wave (Ch1) and a cyan square wave (Ch2). The measurement area at the bottom displays various parameters for both channels. The right menu area contains a list of measurement parameters, and the main menu area at the bottom provides access to different software features.


	Current	Total Wtms	Minimum	Maximum	Mean	Std Deviation
Frequency (Ch1)	495.9 MHz	4520	493.9 MHz	498.1 MHz	496.1 MHz	498.7 kHz
Amplitude (Ch1)	200 mV	4520	190 mV	202.5 mV	197.9 mV	1.811 mV
Pos Overshoot (Ch2)	7.016 %	4300	868.9 m%	10.14 %	5.209 %	1.299 %
Period (Ch2)	5.059 ns	3286	4.994 ns	5.089 ns	5.041 ns	11.47 ps

The PicoScope 9201 has an intuitive Windows graphical user interface, so you won't have to spend a lot of time learning to use the instrument. Pull-down menus give you easy access to advanced features, and icons provide quick access to an extensive set of common tests and measurements.

2-Channel 12-GHz Miniature Sampler



The PicoScope 9201 includes a 2-channel sampler. This sampler is designed for precise measurements on high-speed, low-amplitude signals and low-loss testing in applications such as microwave systems research and development, digital device characterisation, and high-speed digital communications circuit design. It provides an acquisition rise time of 29.2 ps, with a typical 12-GHz equivalent bandwidth, and maximum RMS noise of 2.5 mV to ensure clean, undistorted signals. The electrical channel has both a 12 GHz mode for better waveform fidelity, and an 8 GHz mode for optimum noise performance.

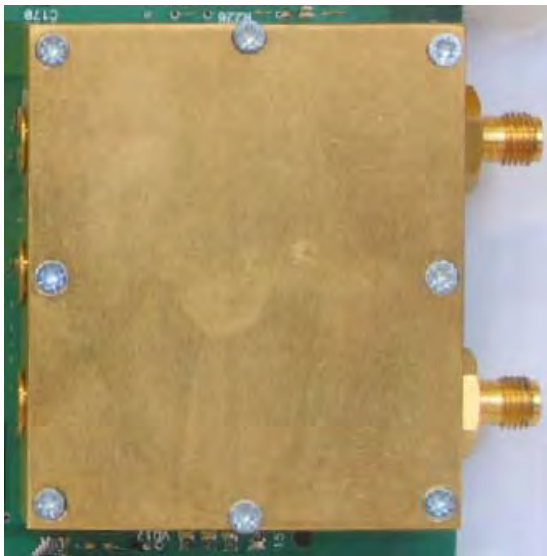


2-channel 12-GHz sampler used in the PicoScope 9201

Key specifications:

Number of channels	2 (simultaneous acquisition)
Bandwidth (-3dB)	DC to 12 GHz (<i>full BW</i>) DC to 8 GHz (<i>narrow BW</i>)
Rise time (10%-90%)	≤ 29.2 ps (<i>full BW</i>) ≤ 43.8 ps (<i>narrow BW</i>)
RMS noise (maximum)	≤ 2.5 mV (<i>full BW</i>) ≤ 2 mV (<i>narrow BW</i>)
Maximum operating input voltage	1.0 V p-p on ± 1 V range
Maximum safe input voltage	16 dBm, or ± 2 V (<i>dc + peak ac</i>)
Nominal input impedance	$(50 \pm 1) \Omega$
Input connectors	SMA, 3.5 x 1.52 (f)


Electrical Rise Time Measurement Error vs. Oscilloscope Bandwidth

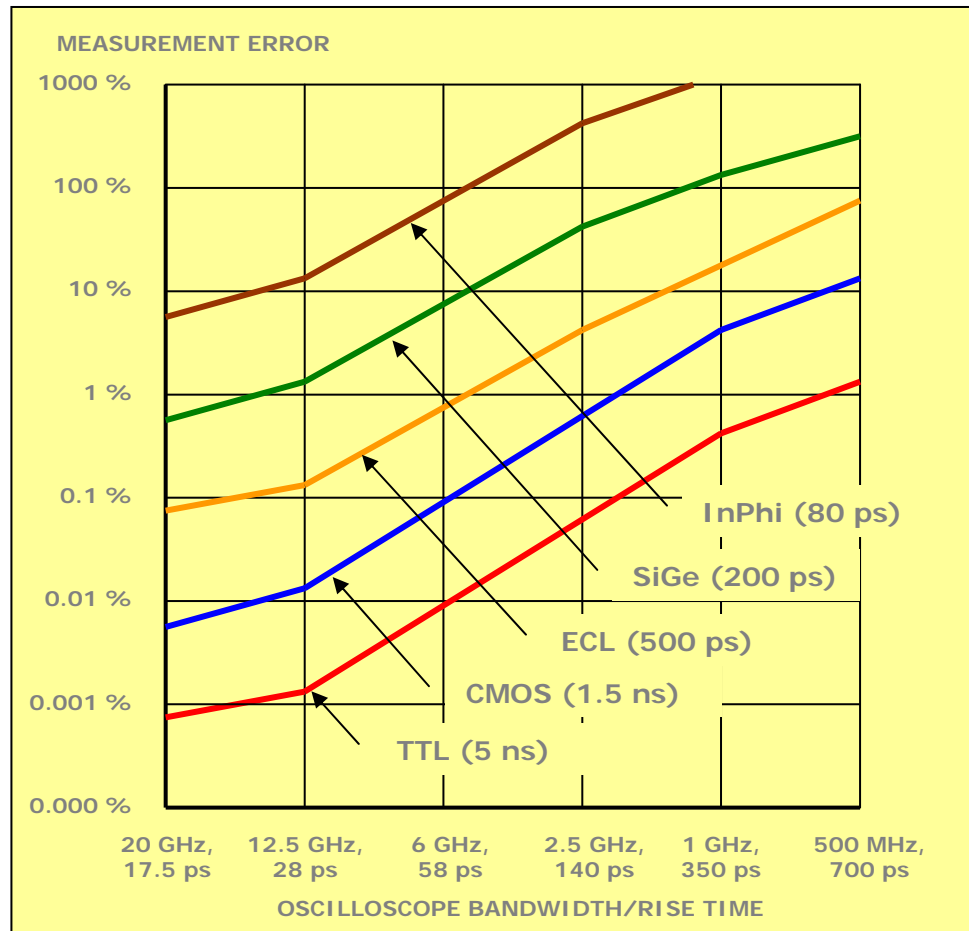

When the scope bandwidth (BW) is:	Rise time slowing error is:
Equal to signal edge BW	▶ 41%
Twice as fast as signal edge BW	▶ 12%
Three times as fast as signal edge BW	▶ 5%
Five times as fast as signal edge BW	▶ 2%

Timebase

The timebase allows you to control the horizontal display through the Main, Intensified, Delayed or Dual Delayed timebases, and also the TIME / DIV and DELAY functions.

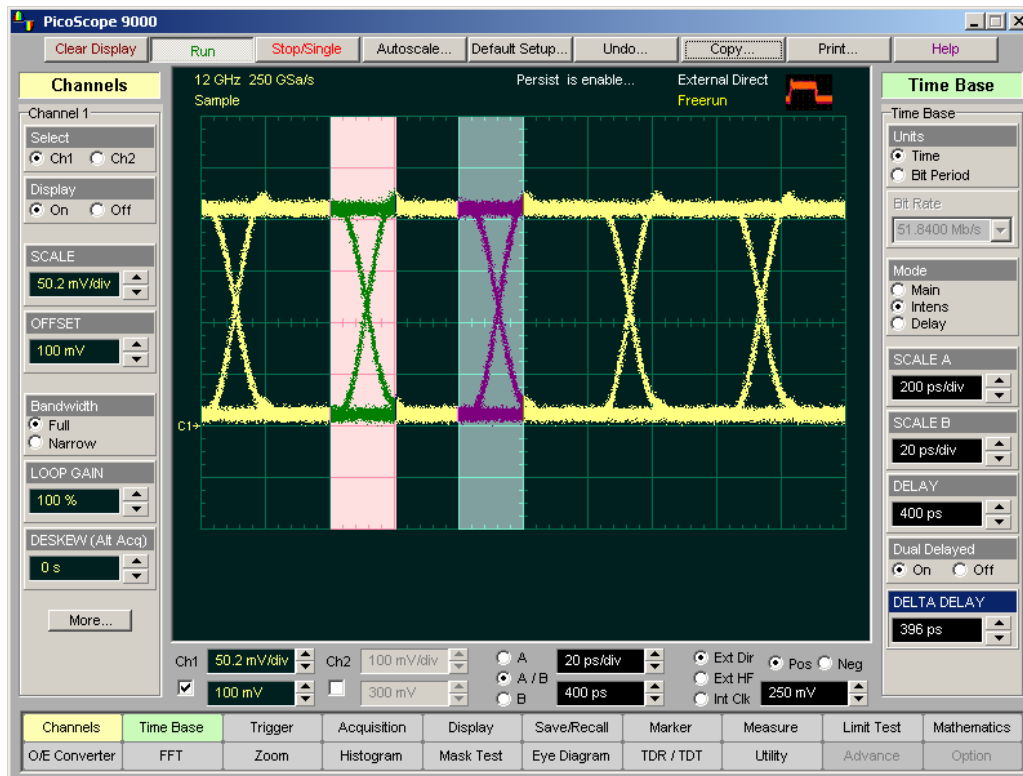

The Units function of the PicoScope 9201 timebase lets you set the instrument timebase to:


- ▶ Basic time units (second)
- ▶ Bit period (data rate)

Bit period units provide an easy and intuitive way to display digital communication signals.

- ▶ Timebase:
20 ps/div to 2 ms/div
- ▶ Delta time accuracy:
 $\pm 0.4\%$ of reading ± 15 ps \pm
100 ppm of delay setting (typical)


A 2.5 Gbps eye diagram displayed with dual-intensified time base

Timebase Windowing

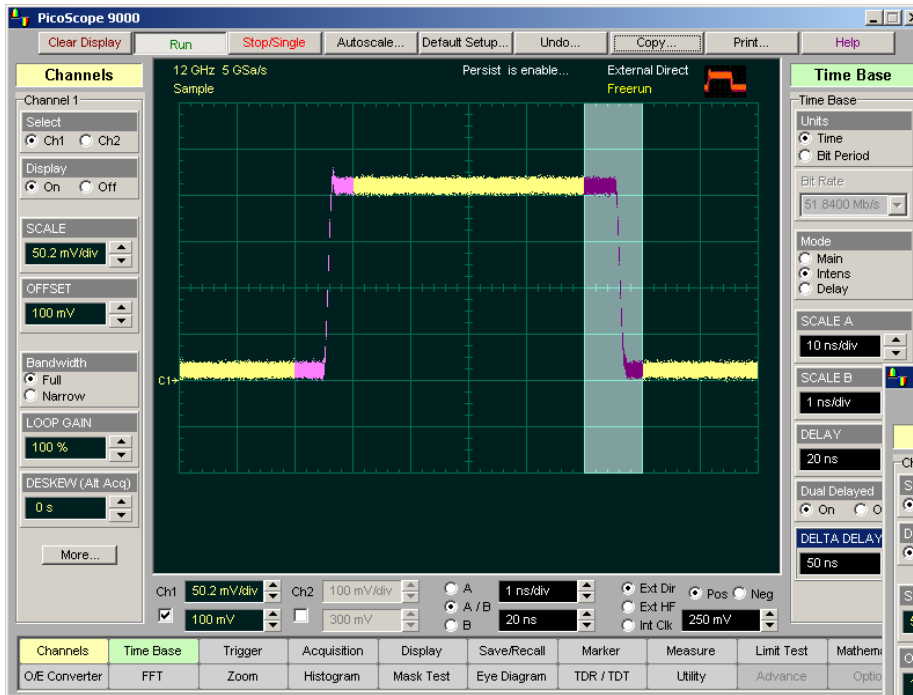

The Timebase Windowing function is similar to the delayed or dual delayed sweep on analog oscilloscopes because it turns on an expanded time base.

Expanded timebase allows you to pinpoint and to horizontally expand a portion (or two portions) of the signal for a more detailed or high-resolution analysis.

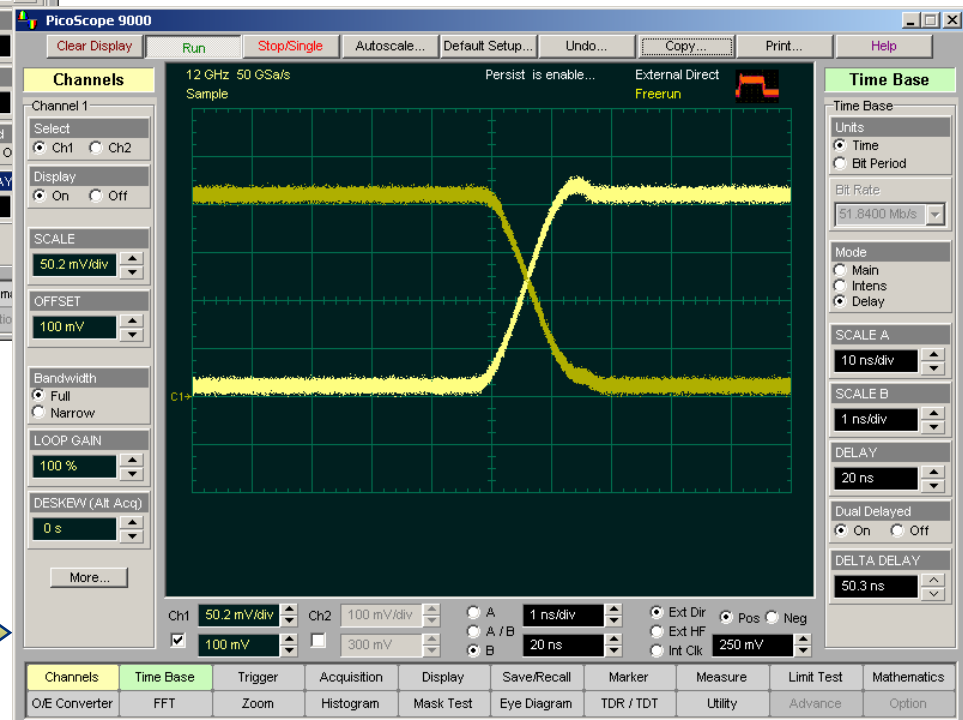

Left picture shows a waveform acquired with Intensified Time Base

Right picture shows the same waveform acquired with Dual Delay Time Base.

Measured Pulse Width = 50.3 ns

Direct Trigger




Equipment connections for Direct Trigger Test

Key specifications of Direct Trigger:

- ▶ DC to 1 GHz trigger bandwidth
- ▶ 100 mV p-p DC to 100 MHz, 400 mV p-p at 1 GHz sensitivity
- ▶ <3.5 ps max RMS jitter


The power of wide-bandwidth sampling oscilloscopes is largely useless without fast, low-jitter triggering.

The PicoScope 9201 is equipped with built-in direct trigger for signals up to 1 GHz repetitive rates without using an external trigger unit.

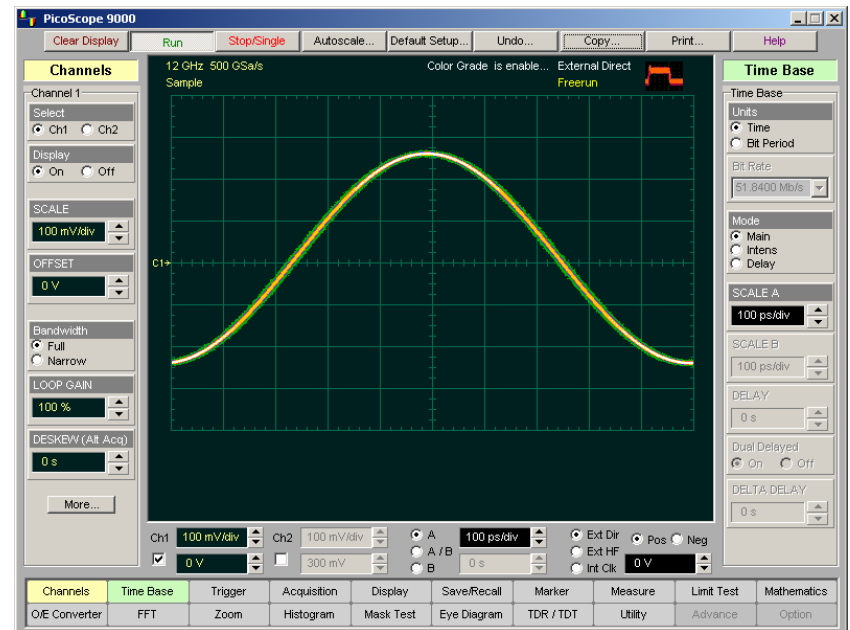

Typical picture of a 1 GHz signal using Direct Trigger

Direct Trigger Jitter

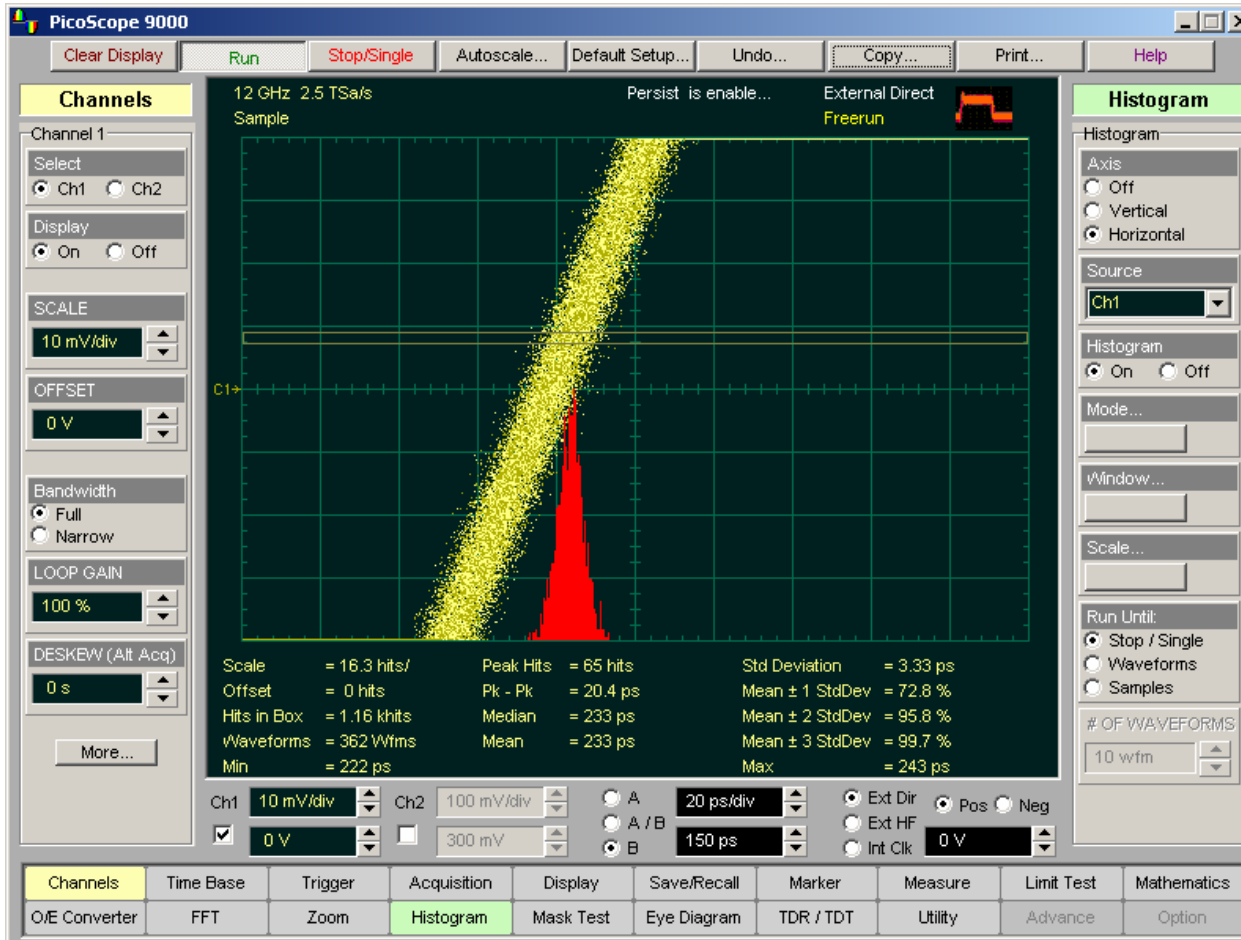

Timing inaccuracy leads to waveform jitter.

RMS Direct Trigger

Maximum jitter:

3.5 ps + 20 ppm of delay



Typical picture showing 3.33 ps RMS Direct Trigger jitter with a 1-GHz sine wave signal

HF Prescaled Trigger




The PicoScope 9201's HF (prescaled) trigger is an AC-coupled 10-GHz prescaler for triggering on high-speed data without cumbersome manual adjustment.

The heart of the trigger is a low-noise GaAs frequency divider. Low RMS jitter < 3.5 ps typ. is possible.

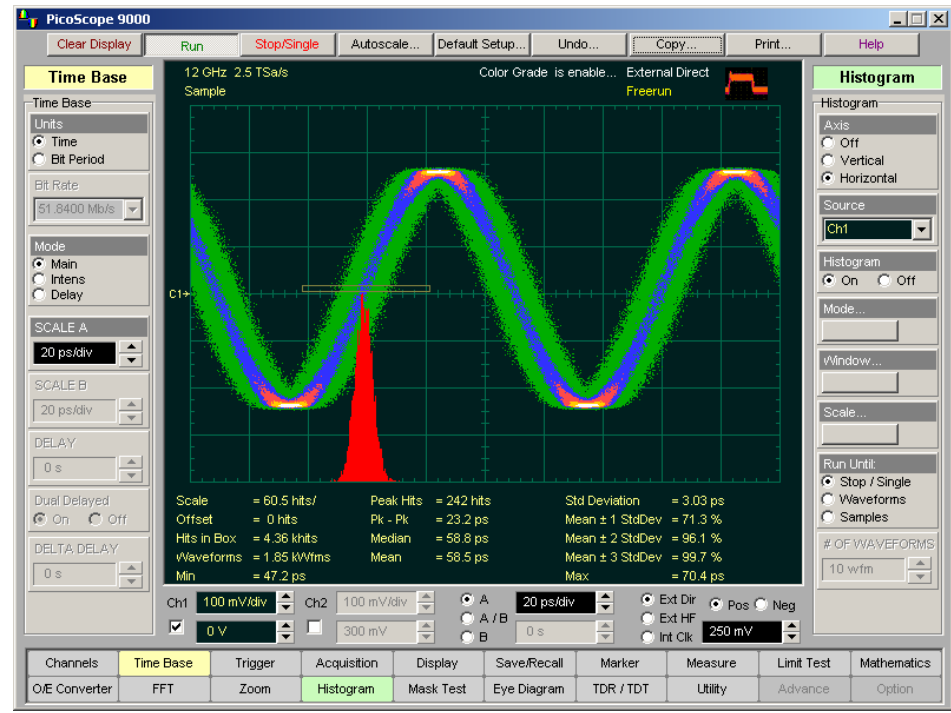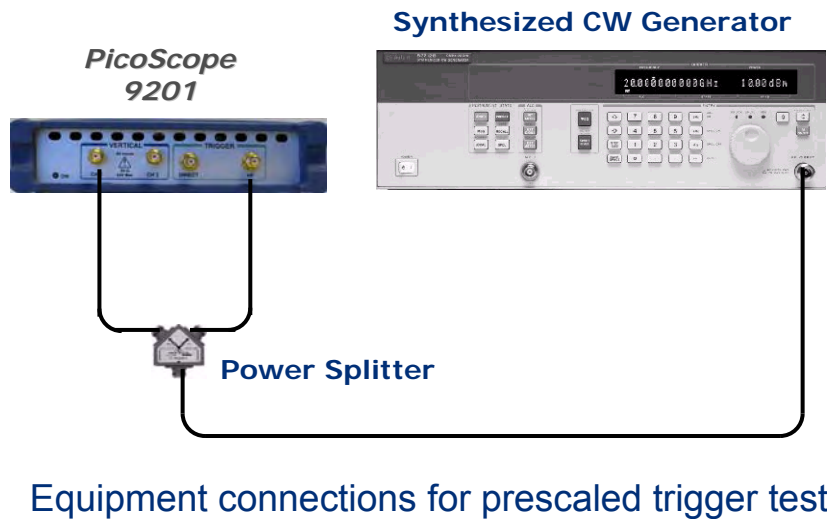

A 10 GHz sine-wave signal with prescaled trigger

HF Trigger Jitter

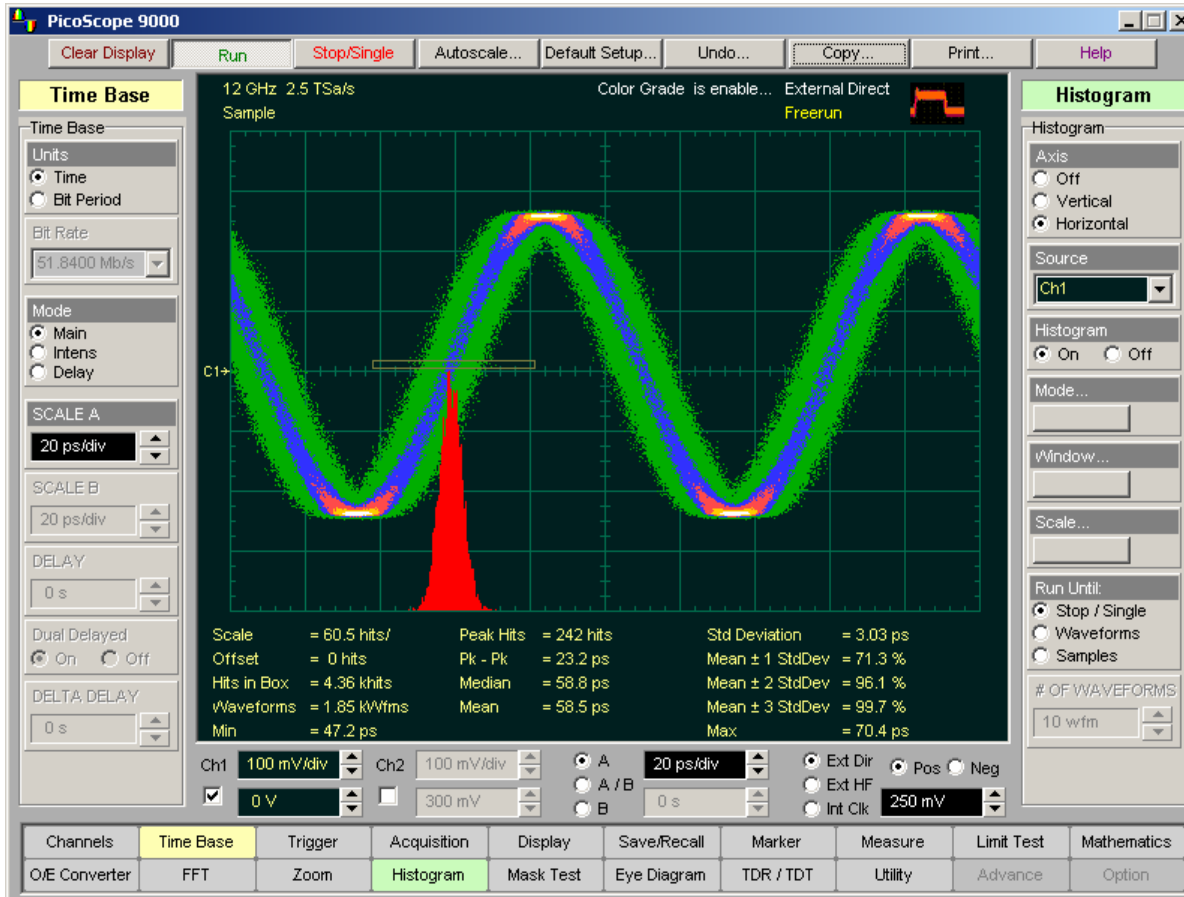

Timing inaccuracy leads to waveform jitter.

Max RMS HF Trigger jitter:
3.5 ps

A typical picture showing 3.03 ps RMS HF trigger jitter with 10-GHz sine wave signal


Averaging Reduces Noise

Averaging is often used to eliminate random noise on the display and increase resolution and accuracy of measurements. If a waveform is buried in noise, averaging can be used to extract a signal from the noise, as shown in this illustration.


Averaging allows you to measure even noisy signals to less than 0.5 ps standard deviation enabling extreme accuracy when you need it most.

The PicoScope 9201 uses three averaging algorithms:

- ▶ Stable average
- ▶ Multiple average
- ▶ Median average

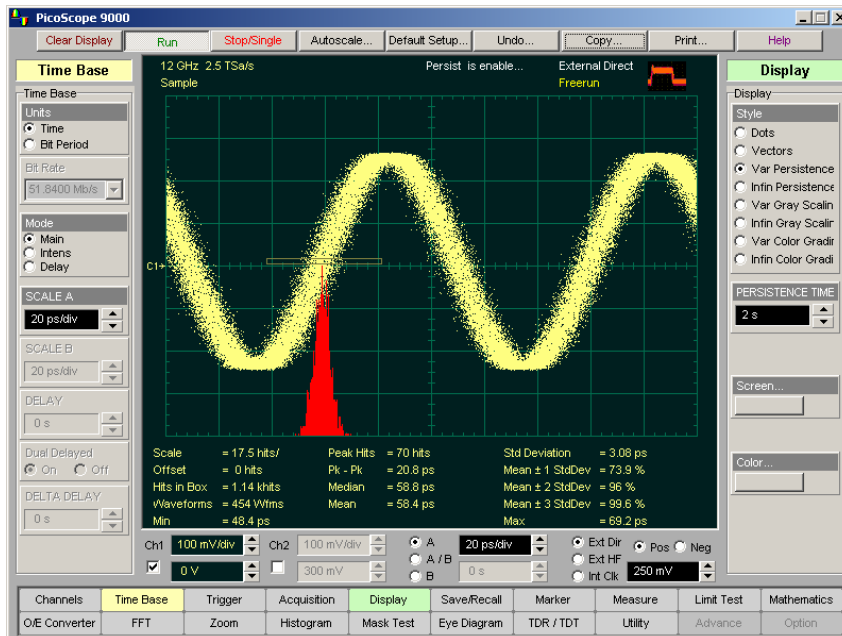


10-GHz signal with noise and jitter components

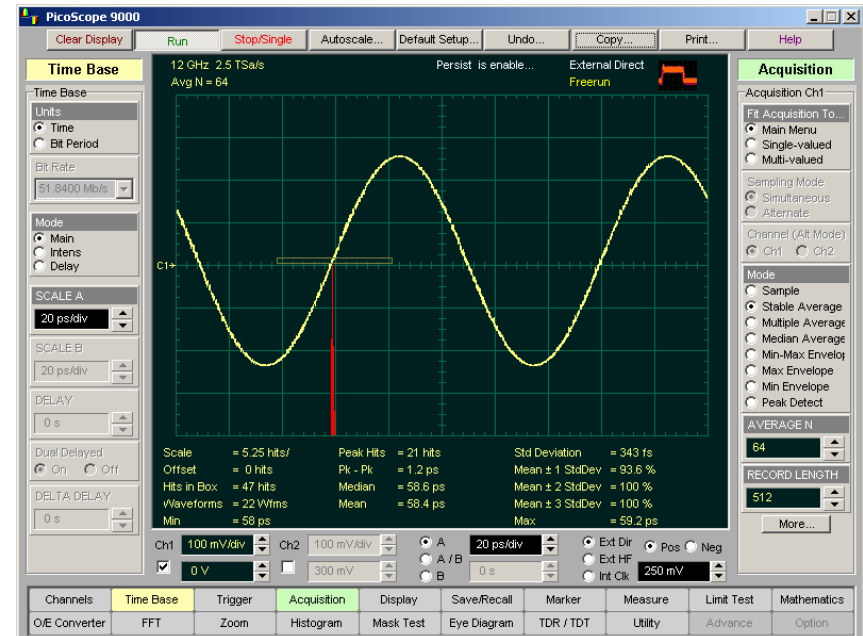

The same 10-GHz signal without noise and jitter components after deep averaging

Buffer Size

The number of samples that form a trace is called the buffer size. The greater the amount of sampled data that is available for analysis or measurements, the greater the buffer size. Buffer size in the PicoScope 9201 can be selected from 32 to 4096 samples in multiples of two.

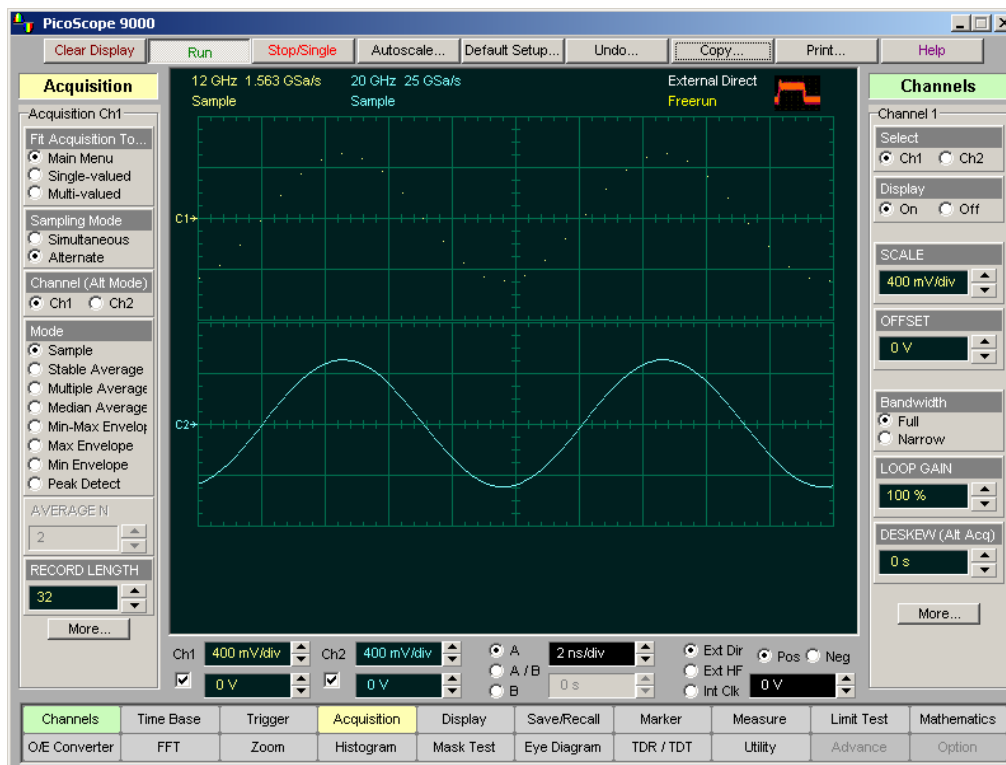

PicoScope 9201 traces with buffer size of 32 (top) and 512 (bottom)

Buffer size is set independently for each channel.

► Equivalent sample rate and buffer size work together. If you combine a small buffer size with a high equivalent sample rate, you will have a very fast throughput (display update rate) but very little data in the channel memory.

► If more data points need to be acquired, a waveform stored with a large buffer size takes longer to construct than one with a small buffer size. However, a large buffer size produces a waveform with higher horizontal resolution, so a trade-off exists between throughput and resolution.

Multi-Waveform Display




- ▶ The PicoScope 9201's colour GUI dedicates a different colour to each trace and its associated readouts to simplify the viewing of complex signals on multiple channels.

PicoScope 9201 eight-waveform display

Informative Waveform Display: Grey Scaling

When you select Grey Scaling mode, a single colour is assigned. As a persistence data map develops, different intensities of that colour are assigned to the range between a minimum and a maximum population.

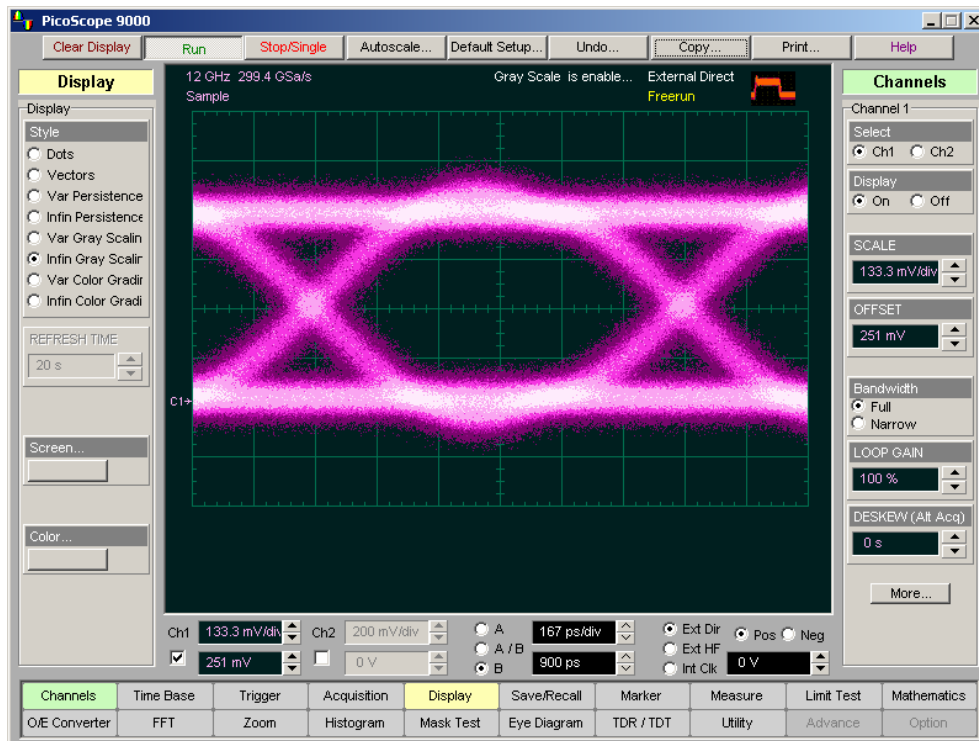

The maximum population automatically gets the highest colour intensity, the minimum population gets the lowest colour intensity, and intermediate populations get intensities in between these extremes.

- ▶ The information in the lower populations (for example, down at the noise level) could be of greater interest to you than the rest.
- ▶ The Grey Scale persistence view highlights the distribution of data so that you can examine it in detail.

Get valuable insight into your device behavior with the Grey Scaling display. View pattern dependencies and different rare versus common events.

Informative Waveform Display: Colour Grading



The accumulated points are colour-graded (shaded with different colours) to indicate the density of the points, and a colour-graded database is built.


Uses

Histograms, mask testing, statistical measurements, eye diagrams, and generally providing more visual information about the waveforms.

How it works

Colour Grading operates over the graticule area. Behind each pixel is a 16-bit counter. Each time a pixel is hit by data, the counter for that pixel is incremented. Each colour used for the colour grade mode represents a range of data counts. As the total count increases, the range of hits represented by each colour also increases. The maximum count for each counter is 65 535.

► Five colours are used. Each colour represents a range of counts. The colours can be changed from the Colour Grade menu.

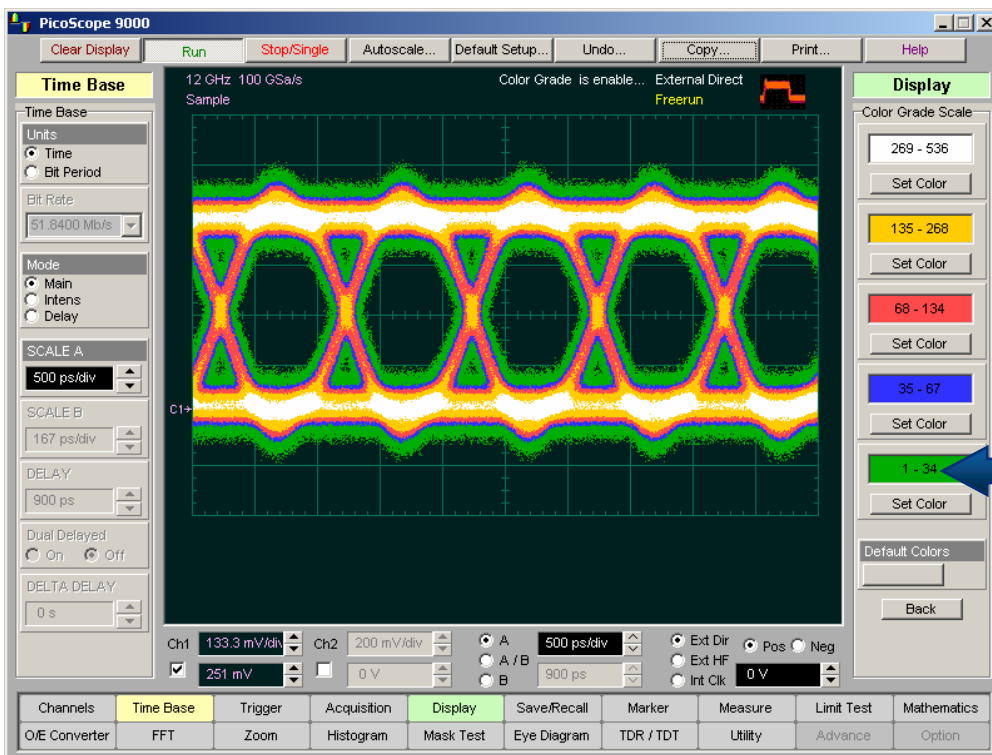


The Colour Graded display allows you clearly view any point of interest on the 1-GHz eye diagram


X-Y Display Format

Three Format menus determine how the instrument draws waveforms:

- ▶ The YT format is the normal time (on the horizontal axis) versus voltage (on the vertical axis).
- ▶ The XY format displays the voltages of two waveforms against each other. Source 1's amplitude is plotted on the horizontal X axis and Source 2's amplitude is plotted on the vertical Y axis.
- ▶ The XY & YT format displays the YT format above the XY format.

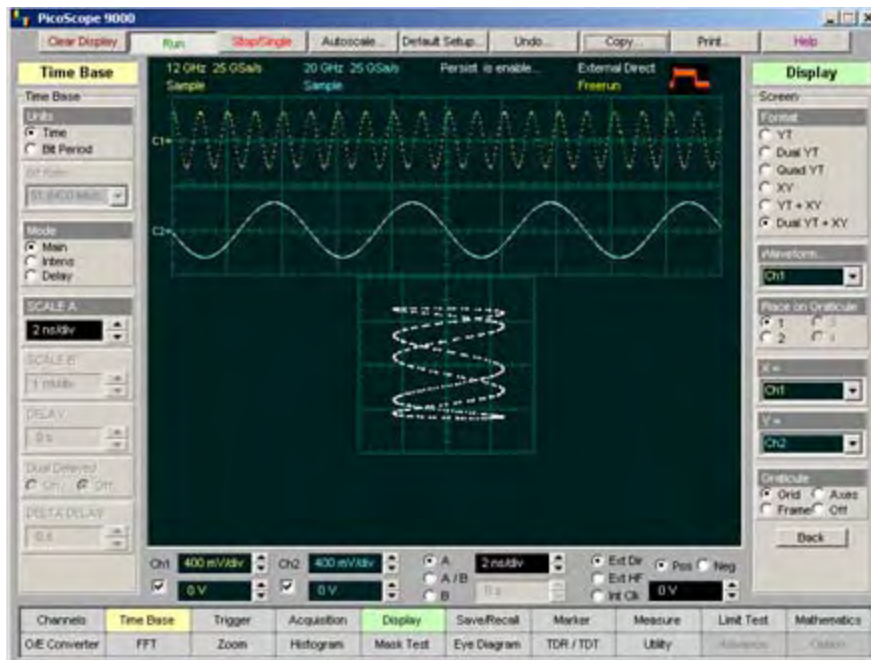

YT & XY Display Format

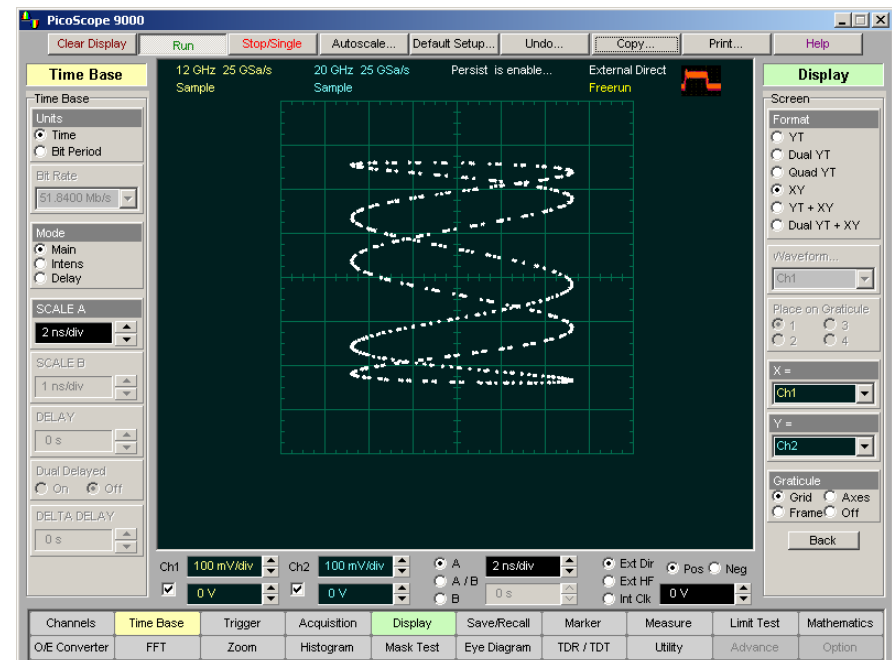

XY Display Format

You can use the XY format to:

- ▶ Compare frequency and phase relationships of two signals
- ▶ Display strain vs. displacement, flow vs. pressure, volts vs. current, or voltage vs. frequency

Waveform Manipulation

There are two features that can simplify your work with waveforms:



- Direct manipulation
- Zoom

Direct manipulation

Use the mouse to click and drag:

- ▶ Ground Reference Indicator
- ▶ Waveform

to new vertical positions, which changes the vertical offset, or to new horizontal positions, which changes the horizontal position or delay value.

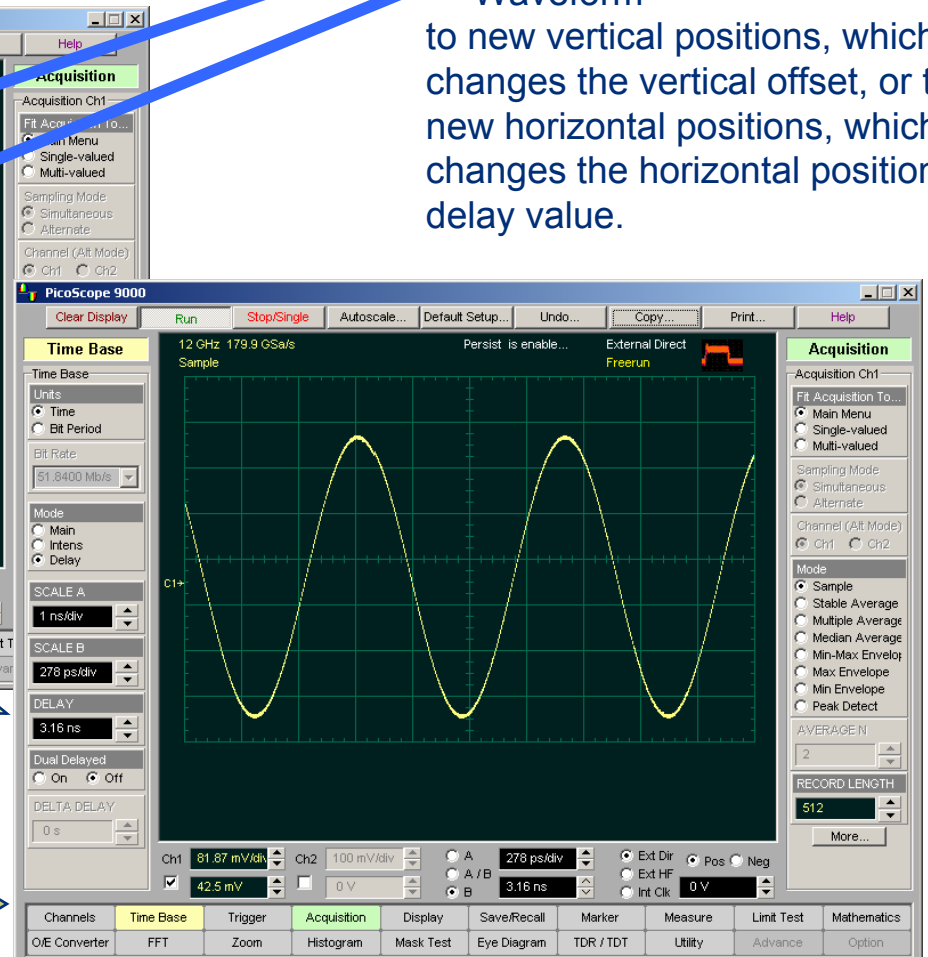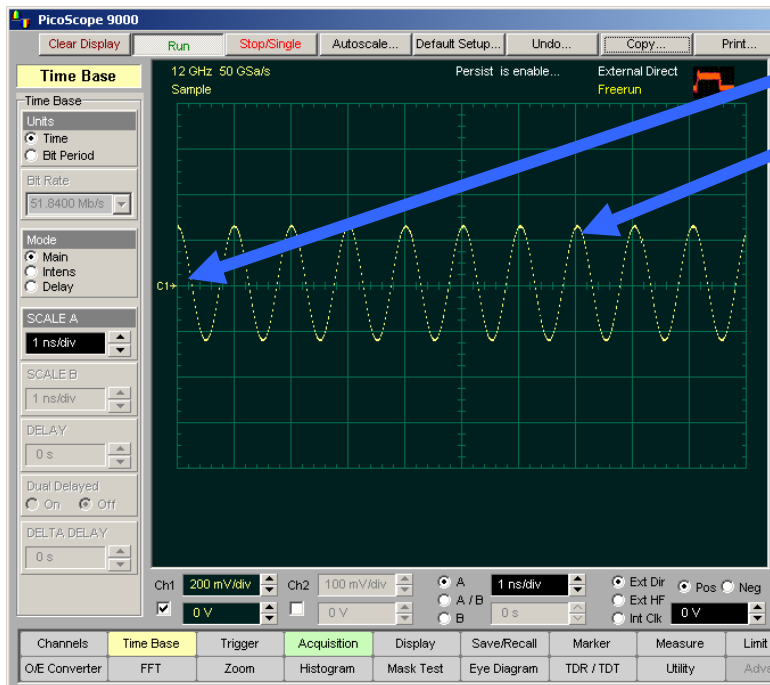


Zoom


- ▶ Draw a box around the section of the waveform you want to expand

- ▶ then click inside the box

Familiar File Management

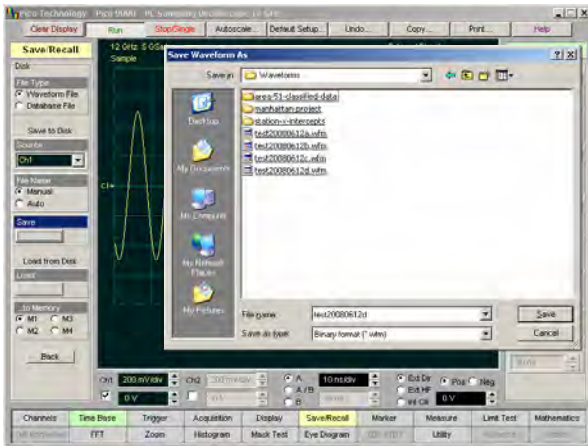

Saving to waveform file

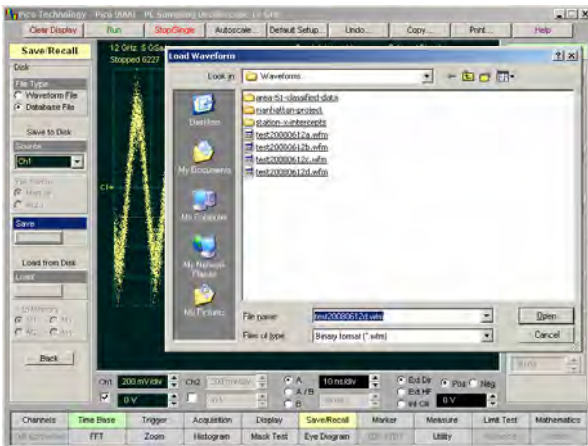

Recalling waveform database



Recalling setups


The standard Windows user interface allows you to save and recall on the PC's hard disk:

- ▶ Waveforms in various formats
- ▶ Waveform database
- ▶ Scope setups
- ▶ Screen images


Copying a Waveform

- Clicking the Copy button copies the program window to the Windows clipboard. You can paste copied information in such Windows programs as Word, Corel Draw and Paint.
- Use the Copy function to add screen shots from the PicoScope 9201 to your documentation.

Copy function includes six different options

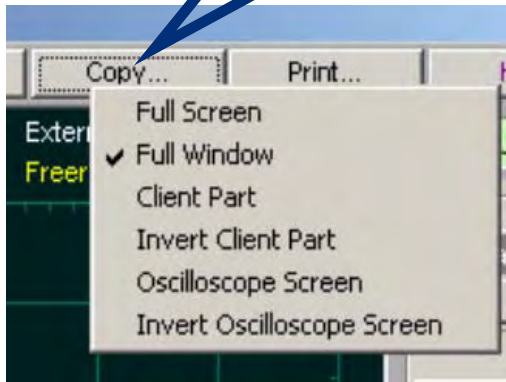


PicoScope 9201 Copy function

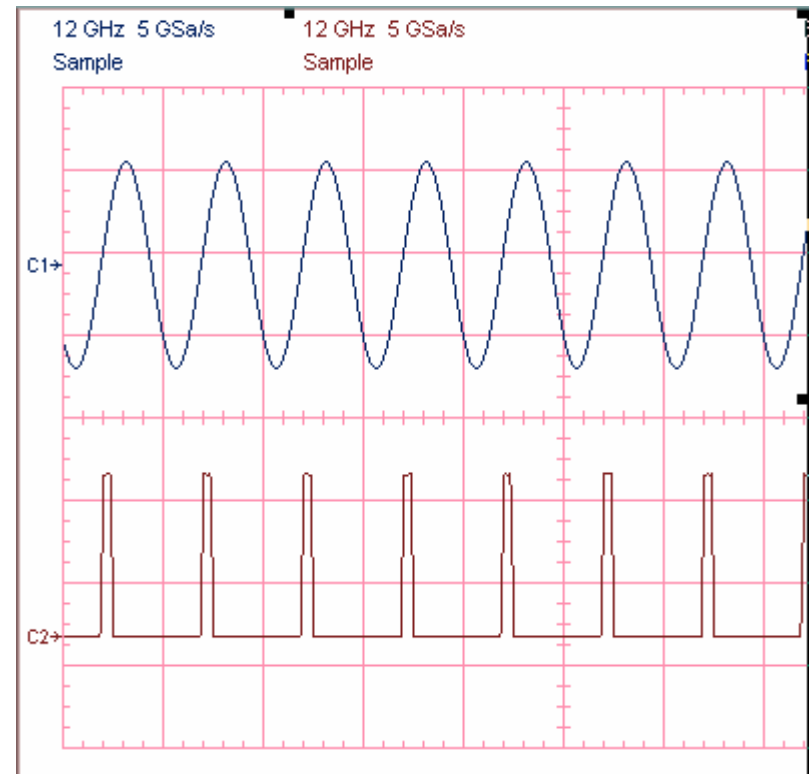

Screen image copied with Invert Oscilloscope Screen option

Autoscale

- Get waveform on screen quickly with the Autoscale button.
- Autoscale adjusts the oscilloscope to display a stable trace of usable size and amplitude. The Autoscale feature of the PicoScope 9201 can quickly give you a stable, meaningful trace display.

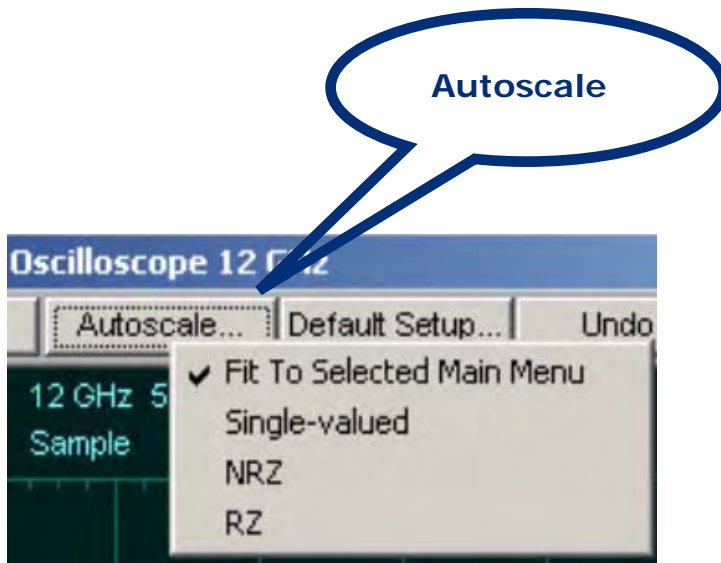

The Autoscale button location

The Autoscale function can find repetitive signals with:

- ▶ Frequency greater than 1 kHz
- ▶ Duty cycle greater than 1%
- ▶ Vertical amplitude greater than 50 mV p-p
- ▶ Trigger amplitude greater than 200 mV p-p




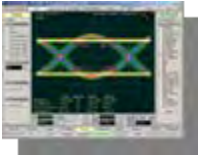
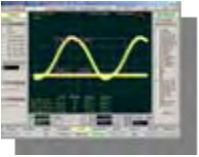
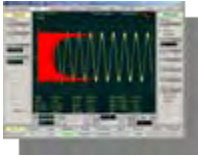
When you click the Autoscale button, you tell the PicoScope 9201 to examine the signal and adjust the following controls for optimum display:

- ▶ Vertical scale and offset
- ▶ Timebase scale and delay
- ▶ Trigger level, if appropriate to that trigger source




Measurements and Tests

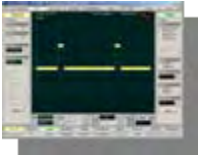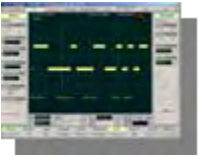

Types of Measurements

<h3>Graticule Measurements</h3>  <p>10 by 8 display graticule with Grid, Axes, Frame and Off options</p>	<h3>Marker Measurements</h3>  <p>Two X, Y, or XY markers provide absolute, delta or ratiometric measurements</p>	<h3>Pulse Measurements</h3>  <p>19 Amplitude, 29 Timing and 5 FFT measurements can be performed automatically</p>
<h3>NRZ Eye Measurements</h3>  <p>Measurement list includes 42 NRZ eye parameters</p>	<h3>RZ Eye Measurements</h3>  <p>43 automatic measurements are built for characterisation of RZ signals</p>	<h3>Histogram Measurements</h3>  <p>Up to 15 statistical measurements of vertical and horizontal histograms</p>


Types of Measurement Test

<h3>Limit Test</h3>  <p>Allows you to automatically compare up to 4 measurement results with pass or fail limits</p>	<h3>Mask Test</h3>  <p>Standard, auto or custom masks can be used for mask test</p>	<h3>Mask Margin Test</h3>  <p>Test is used to determine the margin of compliance for a standard or scaled mask</p>
---	--	---

Markers for Customized Measurements



Markers are movable lines on the display that provide Customized Measurements. You set the marker's values by positioning them on the display. Their actual value, however, comes from internal data. This makes marker measurements more precise than graticules.

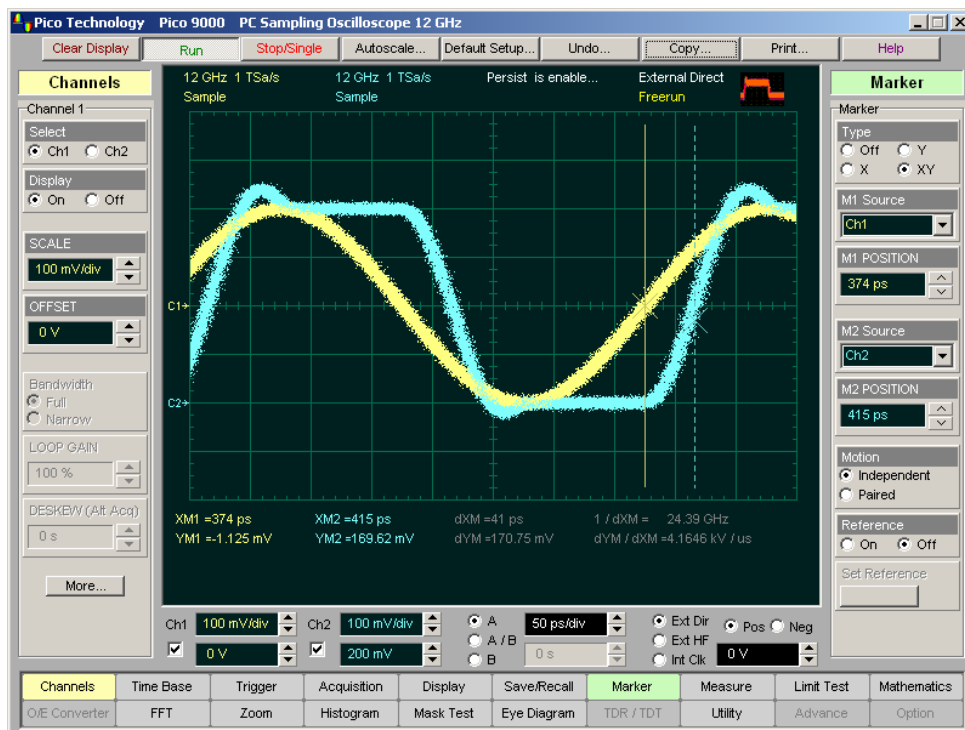

Marker measurements:

- ▶ Absolute vertical (voltage)
- ▶ Ratiometric vertical (voltage)
- ▶ Absolute horizontal (timing)
- ▶ Ratiometric horizontal (timing)

Best marker resolution:


- ▶ Voltage: 50 μ V
- ▶ Time interval: 0.2 ps

Markers measure timing shift of 2.5-GHz signals with 1-ps resolution

Automatic Measurements



The PicoScope 9201 provides accurate Automatic Measurements. They make the measurement process fast and easy while reducing human errors, so are particularly essential for repetitive test. All measurements conform to the IEEE standards. Measurements cover Voltage, Timing and FFT.

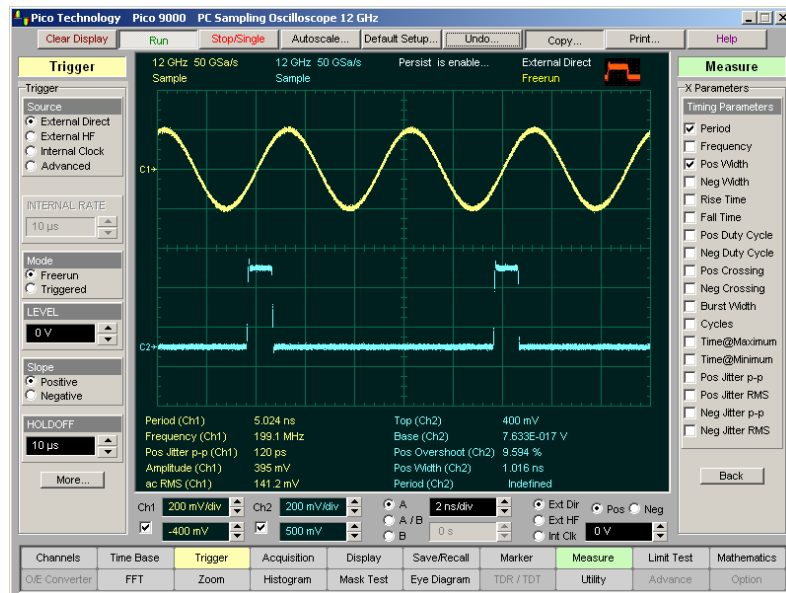

The PicoScope 9201 measures up to 10 parameters simultaneously on 8 sources with maximum time resolution of 0.2 ps and 2% vertical accuracy

19 Amplitude Measurements are made on vertical parameters. They typically measure voltage. They are:

- Maximum
- Top
- Middle
- ac RMS
- Cycle Mean
- Cycle Area
- Gain
- Minimum
- Base
- Mean
- Area
- Cycle dc RMS
- Pos. Overshoot
- Peak-Peak
- Amplitude
- dc RMS
- Cycle Middle
- Cycle ac RMS
- Neg. Overshoot

29 Timing Measurements are made on horizontal parameters. They typically measure seconds or hertz. The main ones are:

- Period
- Neg. Width
- Pos.Duty Cycle
- Neg. Crossing
- Time@Maximum
- Frequency
- Rise Time
- Neg. Duty Cycle
- Burst Width
- Time@Minimum
- Pos. Width
- Fall Time
- Pos Crossing
- Cycles
- Delay


5 FFT Measurements are made on both vertical and horizontal parameters. They typically measure volts and hertz. They are:

- FFT Magnitude
- FFT Delta Magnitude
- THD
- FFT Frequency
- FFT Delta Frequency

Statistics Measurements



The PicoScope 9201 measures up to 4 statistics parameters simultaneously.

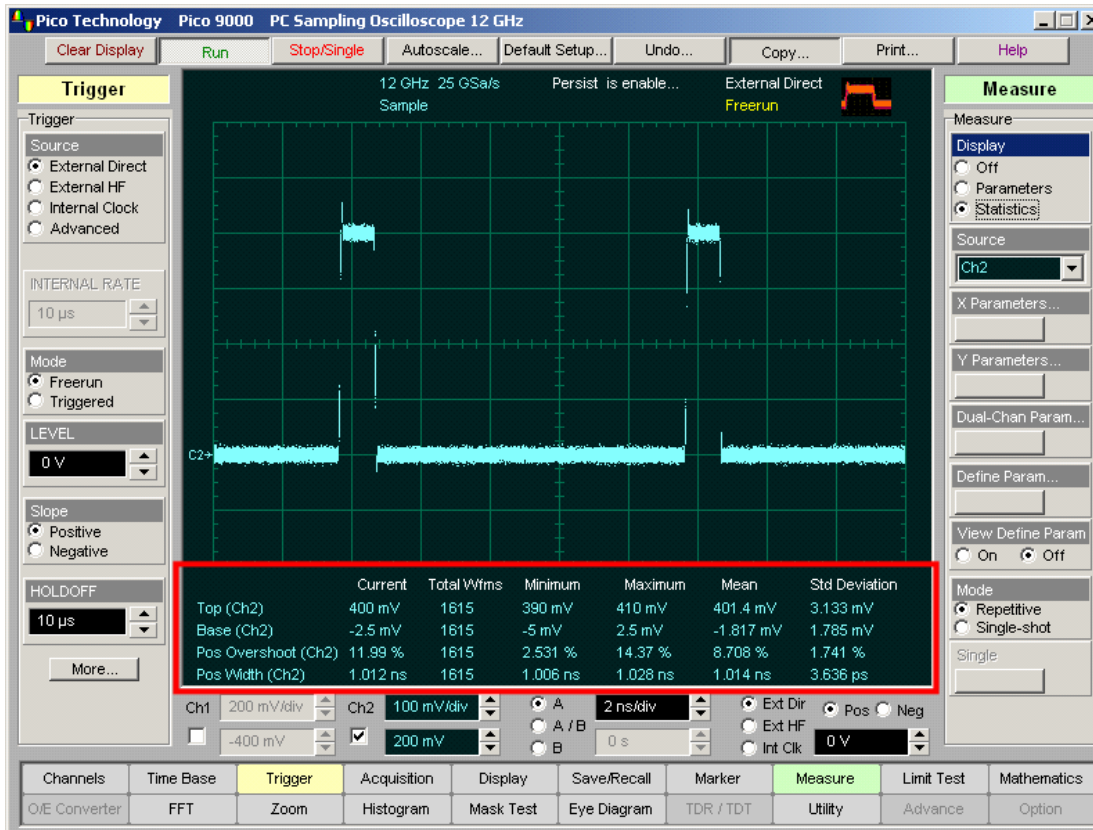

The Statistics function calculates the following values of the automatic measurement results:

- Minimum
- Maximum
- Mean
- Standard Deviation
- Current Value
- Amount of measurements

Minimum and maximum are the absolute extremes of the automatic measurements.

Mean and standard deviation calculate the mean and standard deviation of the automatic measurement results.


Mean is the statistical average of all results for a particular measurement. Standard deviation measures the dispersion of those measurement results.

Simultaneous statistics measurements of Top, Base, Positive Overshoot and Positive Width of a pulse signal

Mathematics




The PicoScope 9201 supports up to four simultaneous mathematical combinations and functional transformations of the acquired waveforms

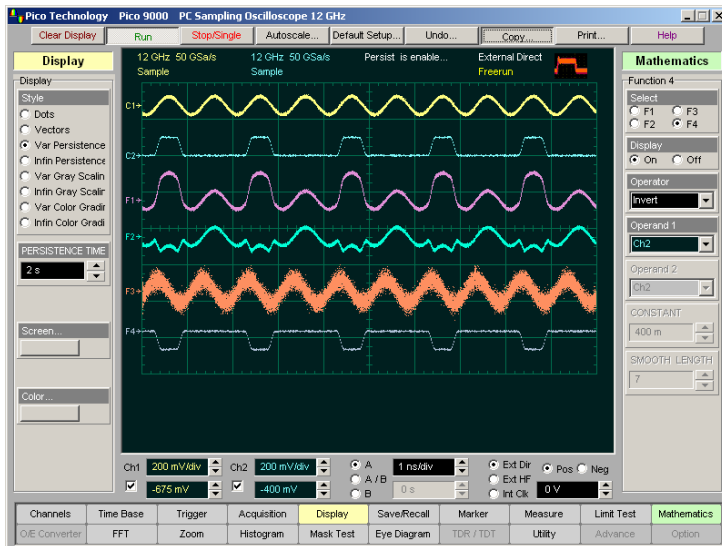

An example of PicoScope 9201 Maths Functions:
 $F1 = Ch1 + Ch2$ $F2 = Ch1 - Ch2$
 $F3 = Diff(Ch1)$ $F4 = Inv(Ch2)$

Source (operand) waveform (Ch1)

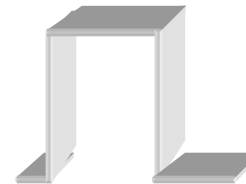

Maths function (operator, Divide)



Maths function (waveform F1)



You can select any of the maths functions as a mathematical operator to act on the operand or operands. A waveform maths operator is a mathematical function that requires either one or two sources.

The operators that involve two waveform sources are:

- Add
- Subtract
- Subtract
- Multiply

The operators that involve one waveform source are:


- Invert
- Exponent (10)
- Differentiate
- Linear interpolation
- Trend
- Absolute
- Logarithm (e)
- Integrate
- Smoothing
- sin(x)/x interpolation
- Exponent (e)
- Logarithm (10)
- Inverse FFT

Fast Fourier Transform

The maths option of the PicoScope 9201 includes FFT capabilities for examining the harmonic content of high-frequency signals. You can perform an FFT on any waveform. The buffer size for the waveform can be up to a maximum of 4096 points.

Use the FFT function to:

- Find crosstalk problems when interfering signal is in phase with trigger
- Find distortion problems in analogue waveforms caused by non-linear amplifiers
- Adjust filter circuits designed to filter out certain harmonics in a waveform

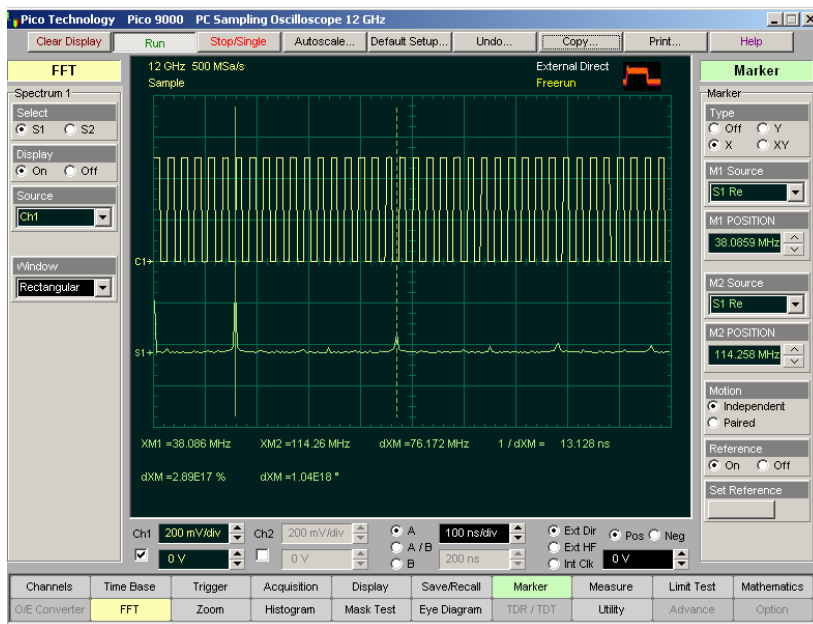

To compensate for some of the limitations of FFT analysis, you can use windowing. The window type defines the bandwidth and shape of the equivalent filter associated with the FFT processing.


The PicoScope 9201 supports six types of windows:

- Rectangular FFT window, which does not taper the time domain data
- Five tapering FFT windows of different shapes –
 - ▶ Hamming window
 - ▶ Hanning window
 - ▶ Flattop window
 - ▶ Blackman-Harris window
 - ▶ Kaiser-Bessel window

FFT analysis provides an extra dimension of performance with simultaneous displays in the time and frequency domain. The picture shows an example of an FFT made with a 38-MHz pulse with near 50 % duty cycle.

Trend Function

Trend is a maths function that represents the evolution of timing parameters using a line graph whose vertical axis is the value of the parameter and whose horizontal axis is the order in which the values were acquired.

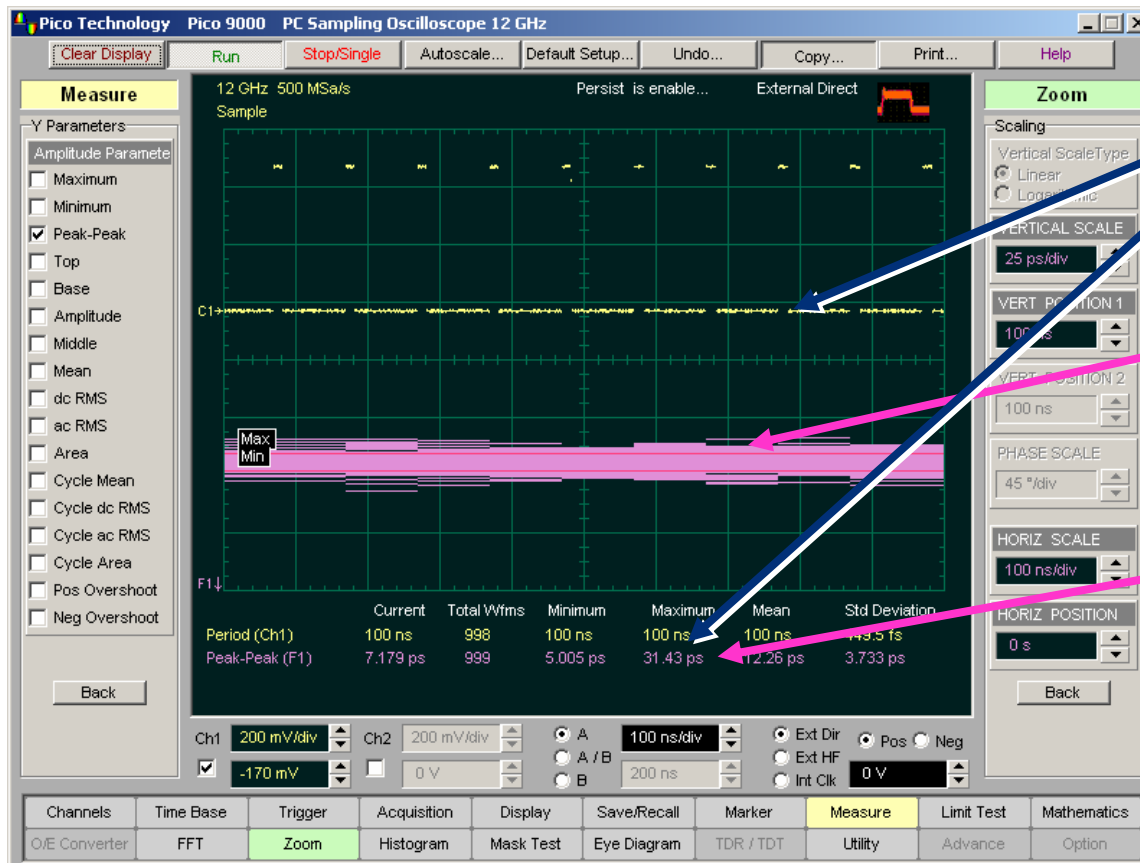

The PicoScope 9201 makes period measurements of pulses

The trend of the period measurement is displayed as a maths function


The amplitude measurement of the trend function gives the evolution of the period value

Vertical Histogram

Histogram statistics:

- ▶ Scale lists the display scale in hits per division or dB per division
- ▶ Offset lists the offset in hits or dB. Offset is the number of hits or dB at the bottom of the display, as opposed to the center of the display.
- ▶ Hits in Box - The total number of samples included in the histogram box
- ▶ Waveforms - Displays the number of waveforms that have contributed to the histogram
- ▶ Peak Hits - The number of hits in the histogram's greatest peak
- ▶ Pk – Pk - The width of the histogram
- ▶ Median - 50 % of the histogram samples are above the median and 50% are below the median
- ▶ Mean - Mean is the average value of all the points in the histogram
- ▶ StdDev - The Standard deviation (σ) value of the histogram
- ▶ $\mu \pm 1$ StdDev, $\mu \pm 2$ StdDev, $\mu \pm 3$ StdDev - The percentage of points that are within $\pm 1\sigma$, $\pm 2\sigma$, or $\pm 3\sigma$ of the mean value


- A histogram is a probability distribution that shows, within a user-definable histogram window, the distribution of acquired data from a source.
- The information gathered by the histogram is used to perform statistical analysis on the source. The most common use for vertical histograms is measuring and characterizing noise on displayed waveforms.

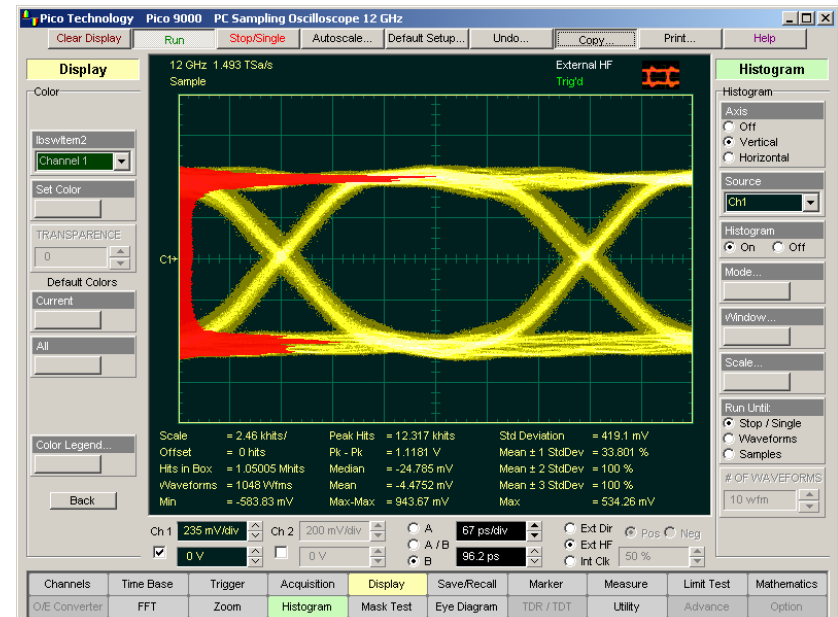

An example of Vertical Histogram Measurement

Statistical Analysis of Noise

Vertical Histograms are most commonly used for measuring and characterizing noise on displayed waveforms.

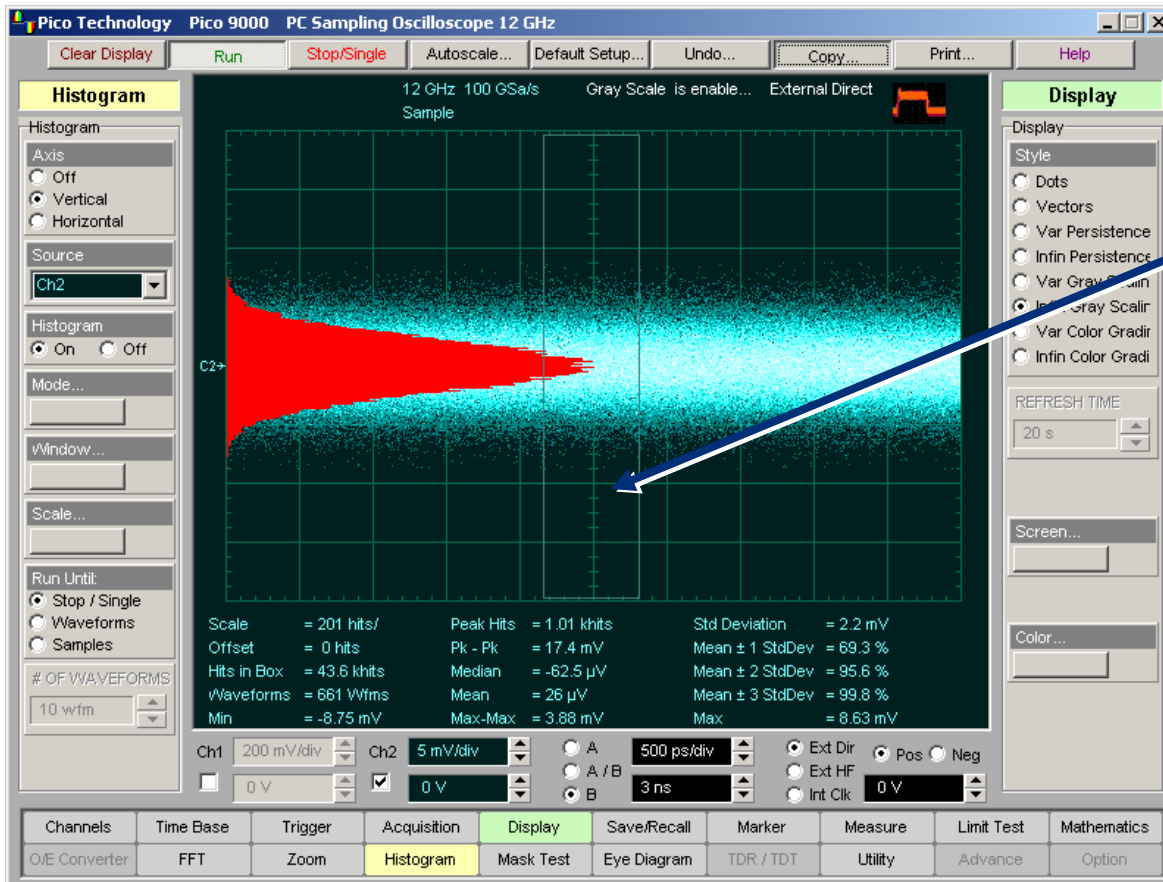

Sizing the histogram window to a narrow portion of time and observing a vertical histogram that measures the noise on an edge


Picture shows PicoScope 9201 noise level measurement with Vertical Histogram

Horizontal Histogram

A **histogram** is a probability distribution that shows, within a user-definable histogram window, the distribution of data acquired from a source. The information gathered by the histogram is used to perform statistical analysis on the source. The most common use for horizontal histogram is measuring and characterizing jitter on displayed waveforms.

Histogram statistics:

- ▶ Scale - the display scale in hits per division or dB per division
- ▶ Offset - the offset in hits or dB. Offset is the number of hits or dB at the bottom of the display, as opposed to the center of the display.
- ▶ Hits in Box - the total number of samples included in the histogram box
- ▶ Waveforms - the number of waveforms that have contributed to the histogram
- ▶ Peak Hits - the number of hits in the histogram's greatest peak
- ▶ Pk - Pk - the width of the histogram
- ▶ Median - 50 % of the histogram samples are above the median and 50% are below the median
- ▶ Mean - the average value of all the points in the histogram
- ▶ StdDev - the standard deviation (σ) of the histogram
- ▶ $\mu \pm 1$ StdDev, $\mu \pm 2$ StdDev, $\mu \pm 3$ StdDev - the percentage of points that are within $\pm 1\sigma$, $\pm 2\sigma$, or $\pm 3\sigma$ of the mean value

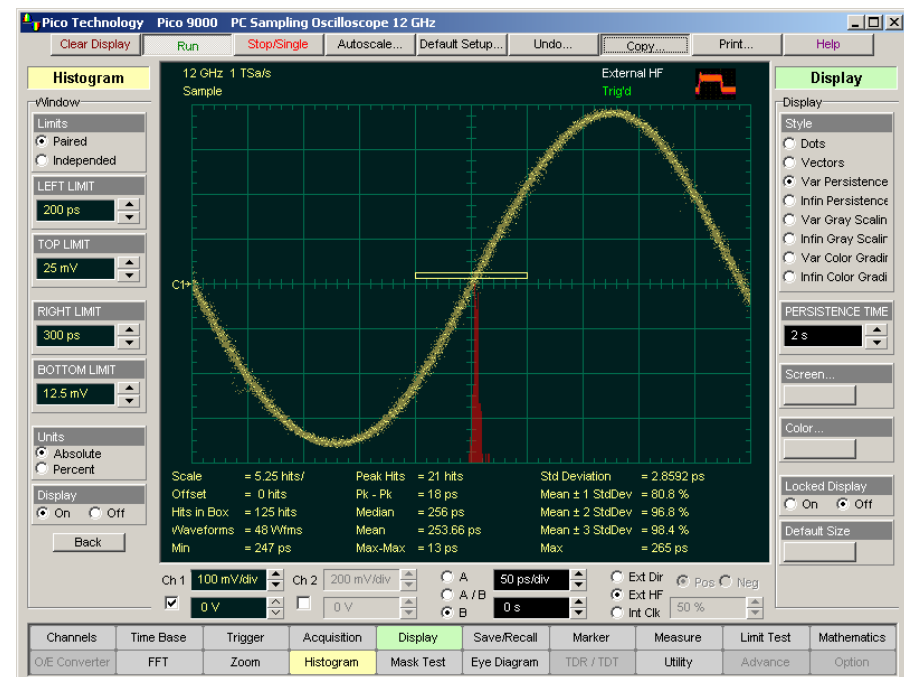

An example of jitter measurement with horizontal histogram



Jitter Measurements

Among other things, jitter is caused by:

Thermal noise	▶ Random and ever-changing, always Gaussian
Upstream reference clocks	▶ From power supplies and oscillators, with harmonic content
Injected noise (EMI/RFI)	▶ Cabling or wiring, from distance sources
Circuit instabilities	▶ Loop bandwidth, dead-band oscillations


Types of jitter:

- Period jitter
- Cycle-to-cycle jitter
- Delay jitter
- Time interval error
- Clock jitter
- Data jitter

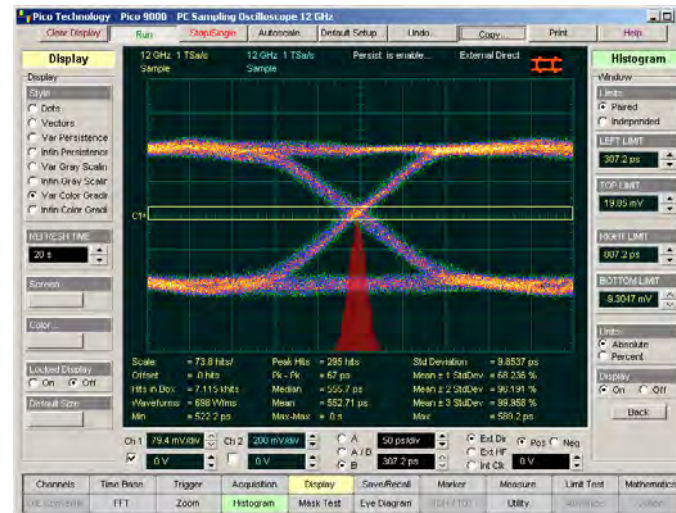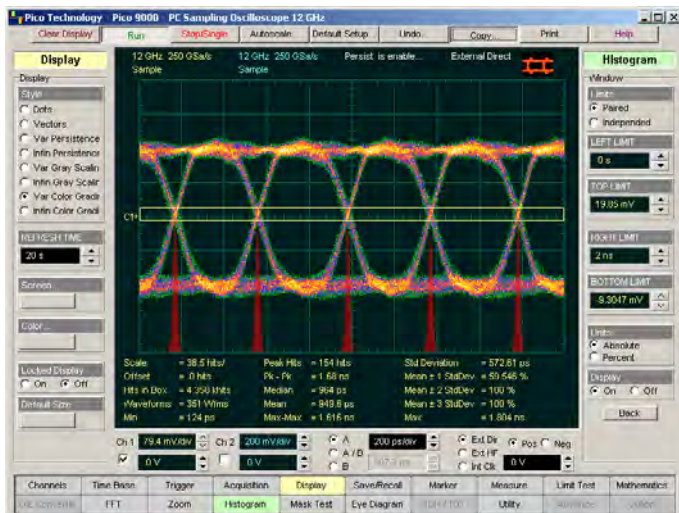


Eye-crossing jitter can be quantified with a horizontal histogram. Here are two examples of an NRZ eye pattern with jitter histogram.

Histogram Measurements of Eye Diagrams


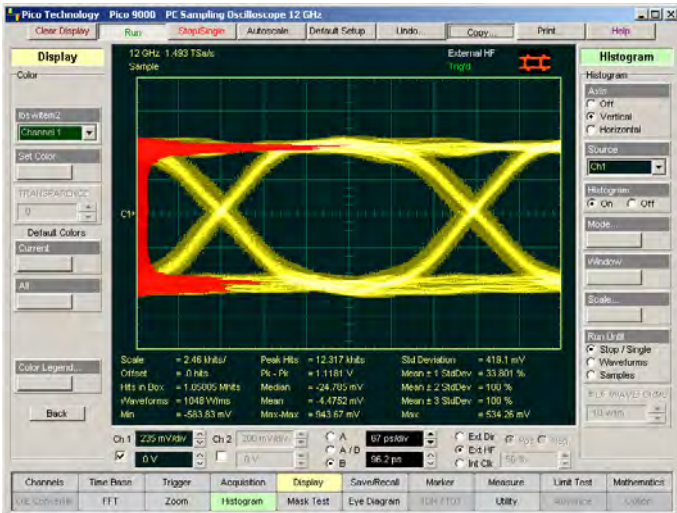


The PicoScope 9201 quickly measures all parameters of a vertical histogram for a 2.5-Gbit Eye Diagram

The PicoScope 9201 quickly measures all parameters of a horizontal histogram with the same 2.5-Gbit Eye Diagram

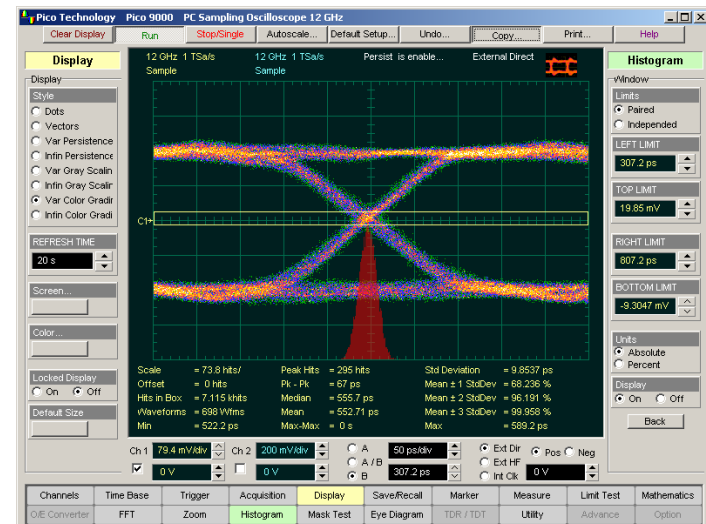

Building an Eye Diagram

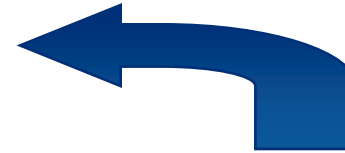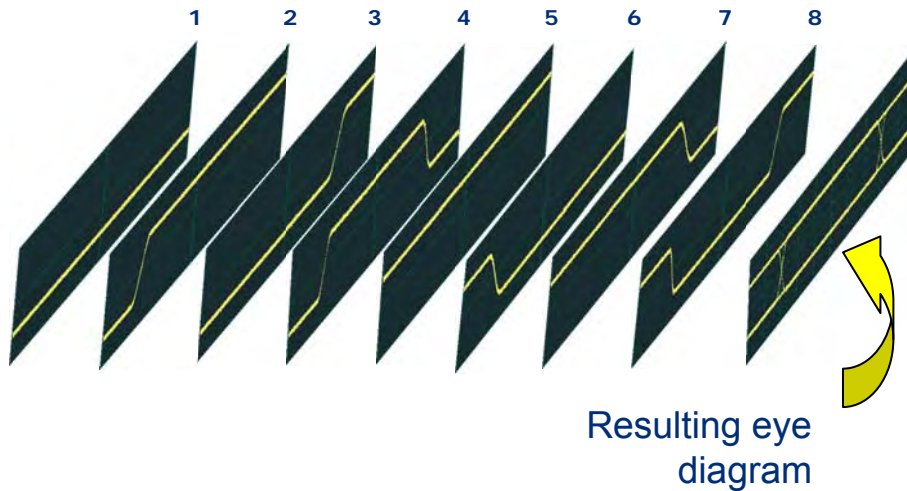

The process of building an eye diagram includes serial acquisitions of the waveform database


The eye diagram is valuable for giving a comprehensive view of all signal integrity faults (except clock jitter):

- ▶ Noise
- ▶ Jitter
- ▶ Reflections
- ▶ Ringing
- ▶ Inter-symbol interference
- ▶ Power and ground coupling

Eye diagram problems with sequential sampling oscilloscope:

- ▶ It is not possible to resolve pattern dependencies
- ▶ Averaging is not available
- ▶ Input dynamic range is less than that of a standard oscilloscope
- ▶ Random noise and pattern dependent. Deterministic errors mask each other.

A Typical PicoScope 9201 Eye Diagram with Mask, Margins and Histogram

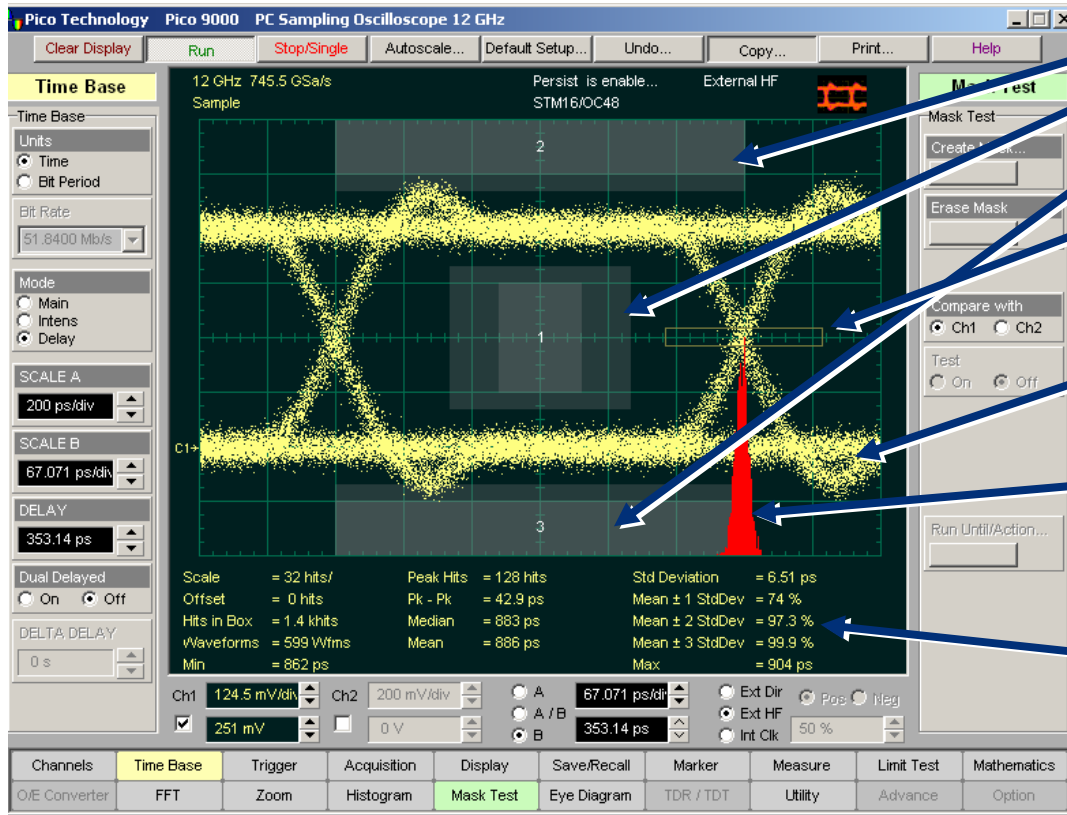

Customisable mask with margins

Histogram window


2.5-Gb/s eye diagram

Using histogram on the eye crossing to characterise jitter

Histogram measurement results

NRZ Eye Diagram Measurements

The PicoScope 9201 quickly measures 42 fundamental parameters used to characterise non-return-to-zero (NRZ) signals. Up to four parameters can be measured simultaneously.

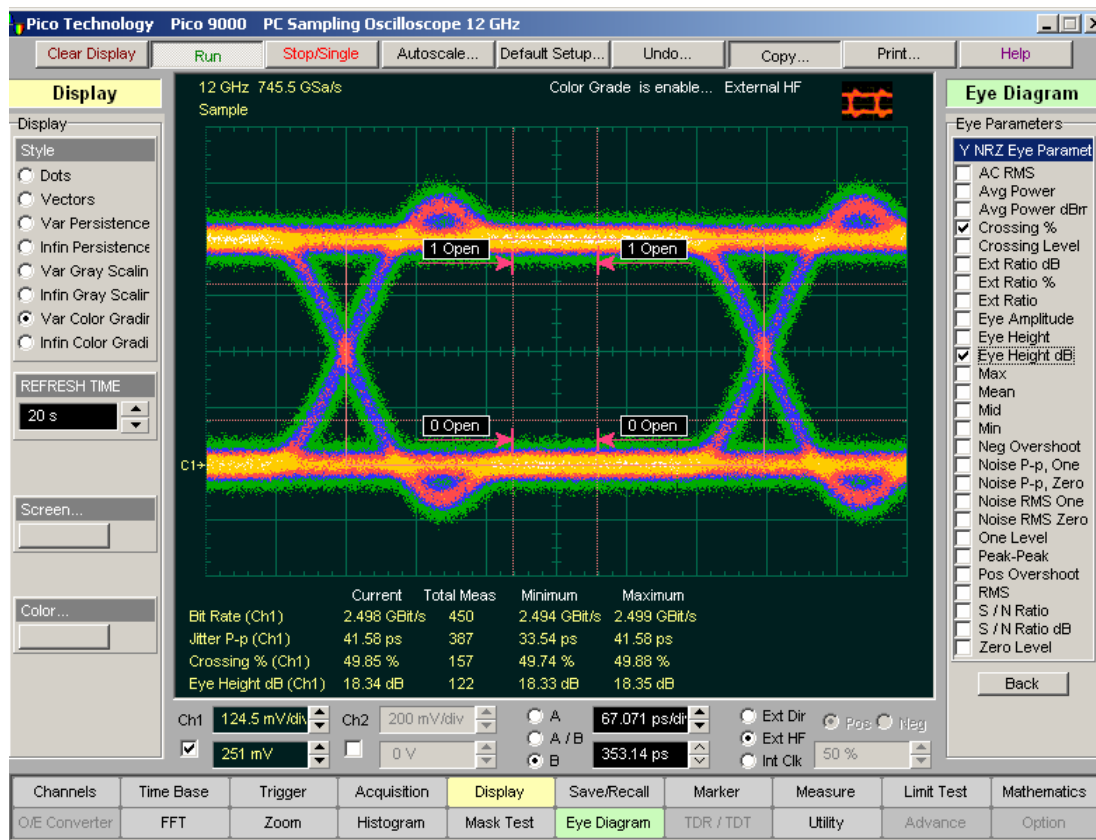


The PicoScope 9201 displaying 4 automatic measurements on a 2.5-Gbit NRZ eye diagram

Examples of NRZ Measurements




Measurement of 622-Mbit eye diagram

Measurement of 1.25-Gbit eye diagram

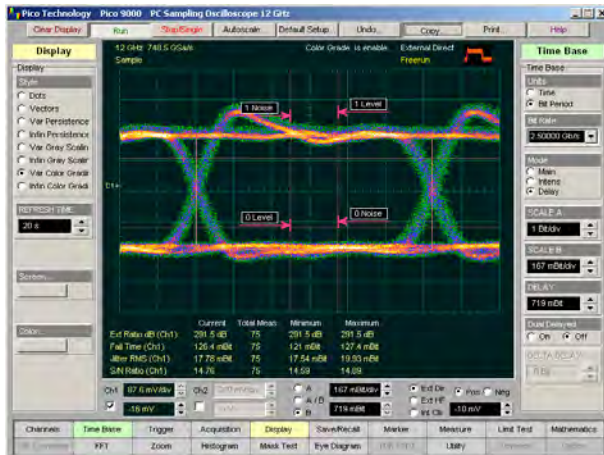


Measurement of 2.5-Gbit eye diagram

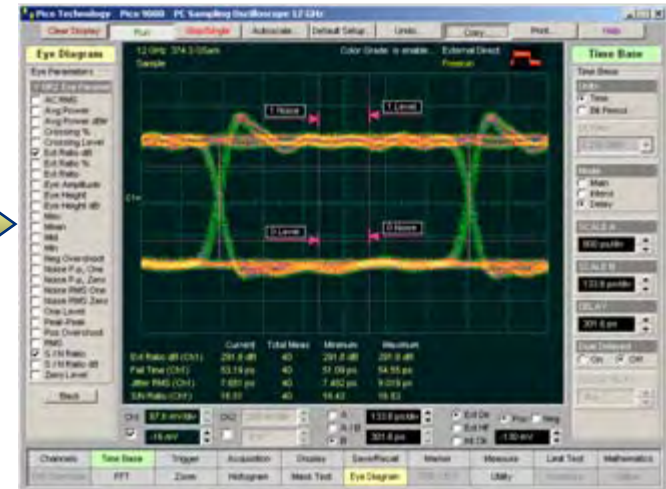

RZ Eye Diagram Analysis

The PicoScope 9201 quickly measures 43 fundamental parameters used to characterise return-to-zero (RZ) signals. Up to four parameters can be measured simultaneously.

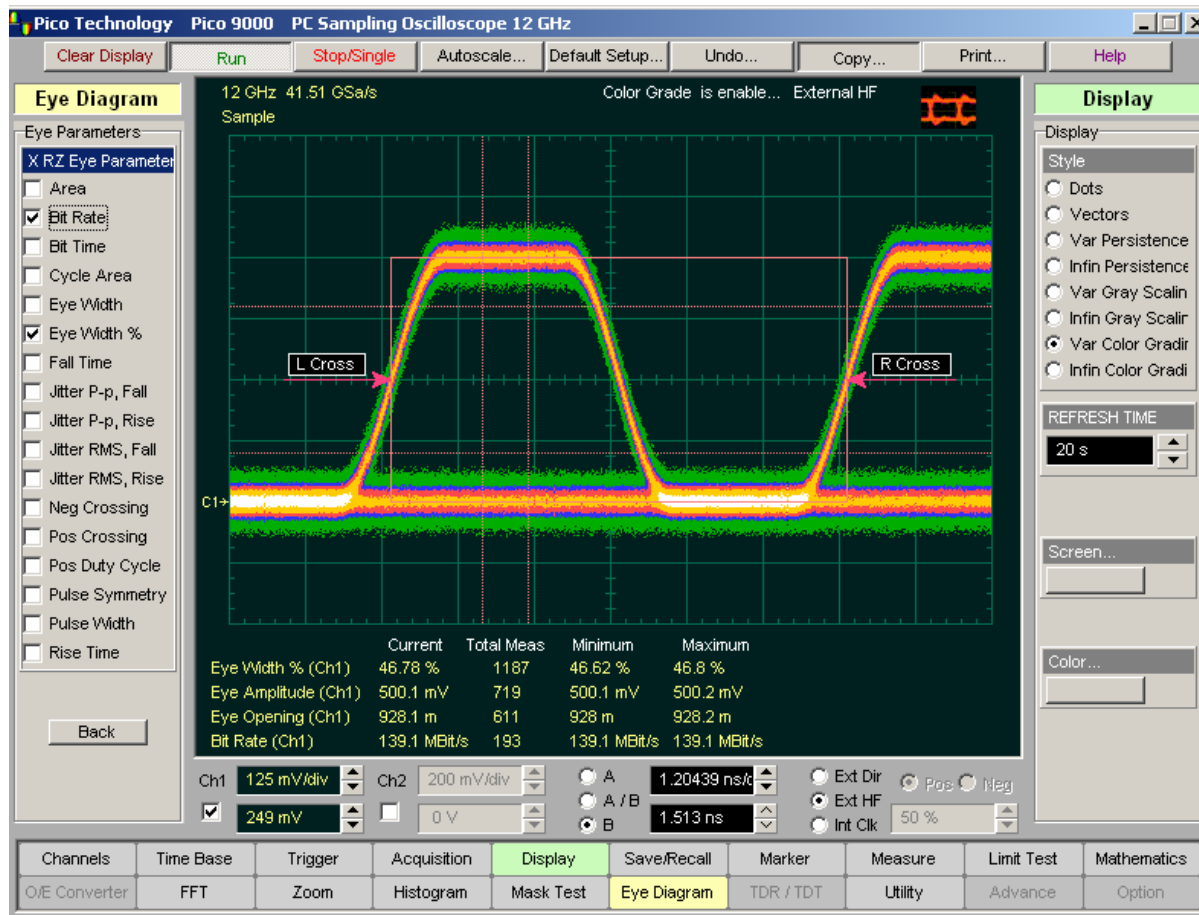

The PicoScope 9201 measuring a 139-Mbit RZ eye diagram

Mask Test


For eye-diagram masks, such as those specified by the SONET and SDH standards, the PicoScope 9201 supports on-board mask drawing for visual comparison. The display can create grey-scaled or colour-graded displays to aid in analysing noise and jitter in eye-diagrams.

Mask test quickly characterises:

- ▶ Noise
- ▶ Jitter
- ▶ Aberrations
- ▶ Rise time
- ▶ Fall time

The on-board mask drawing capability allows simple, operator-independent visual comparison of signal with standard mask.


SONET/SDH (OC64/STM16)
signal compared with the
standard mask, showing a
compliant waveform

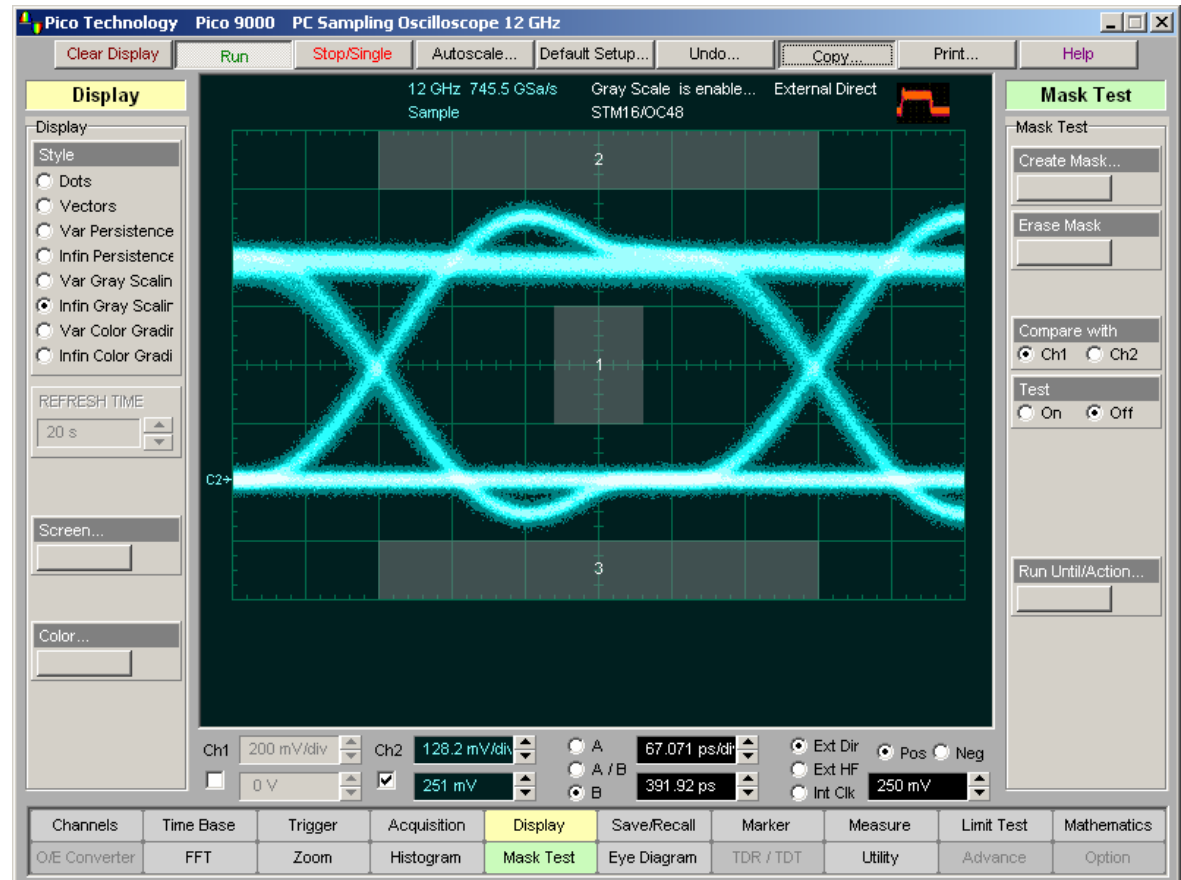


Creating Custom Mask

How PicoScope 9201 builds a custom mask for NRZ waveform



1. Create the top polygon of the mask

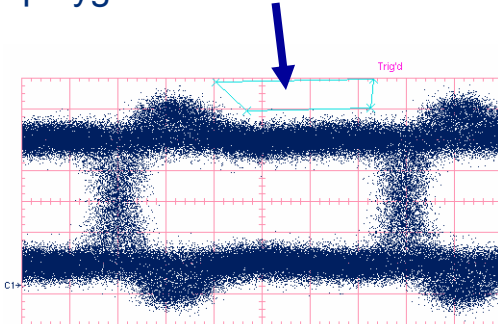


2. Create the centre polygon of the mask

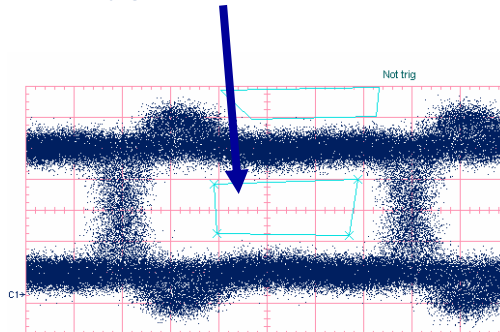

3. Create the bottom polygon of the mask

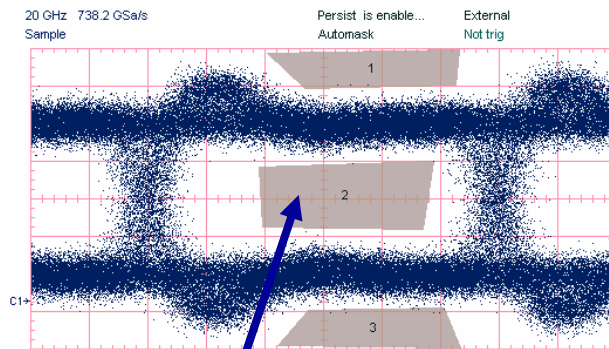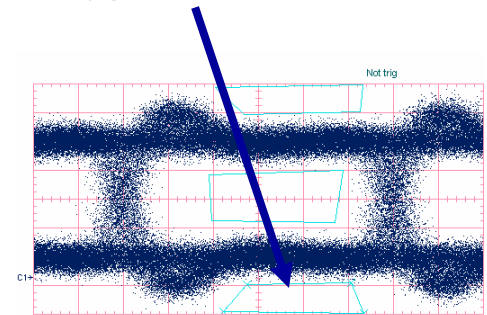

4. Create full mask

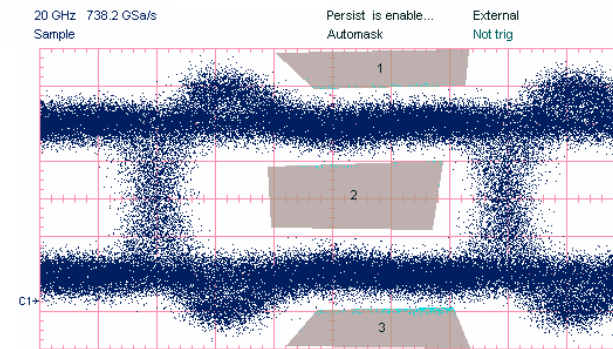


Total Wfms	11.8 k
Failed Samples	281 hits
in Polygon1	51 hits
in Polygon2	29 hits
in Polygon3	201 hits

5. Perform mask test

Mask Margins

Mask margins are used to determine the margin of compliance for a standard or scaled mask.

The PicoScope 9201 goes beyond basic testing with mask margin analysis for process monitoring.

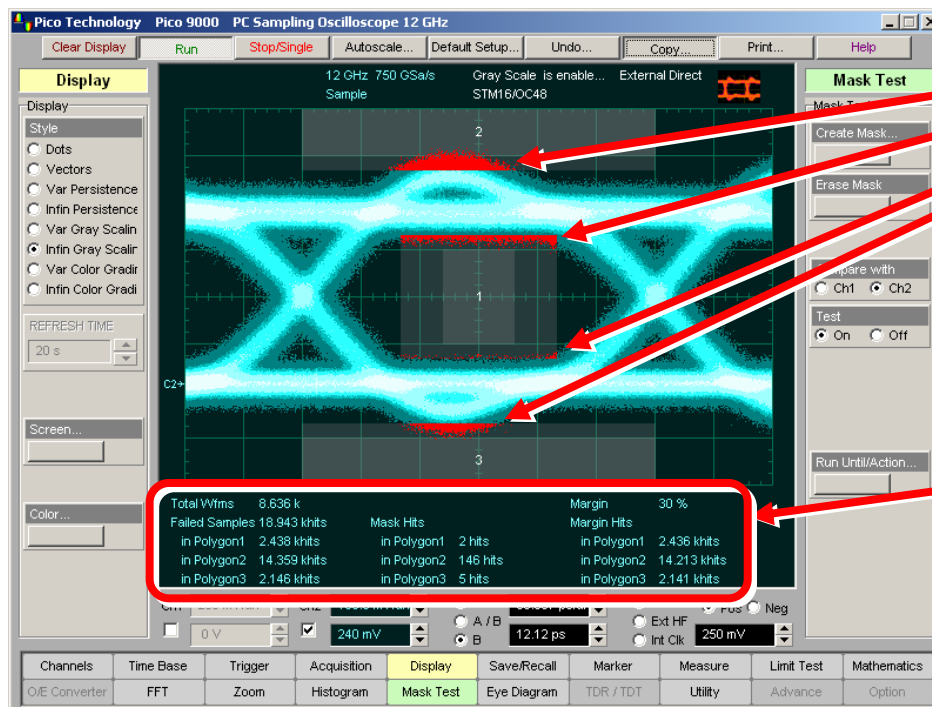



Mask hits/failures are easily viewed with red pixels

Mask test results show:

- ▶ Total waveforms
- ▶ Failed samples
- ▶ Mask hits
- ▶ Mask margin value
- ▶ Margin hits
- ▶ Margin hits in polygon


Mask margins are used to determine the margin of compliance for a standard 2.5 Gbps STM16/OC48 eye diagram or scaled mask

Mask Test Examples

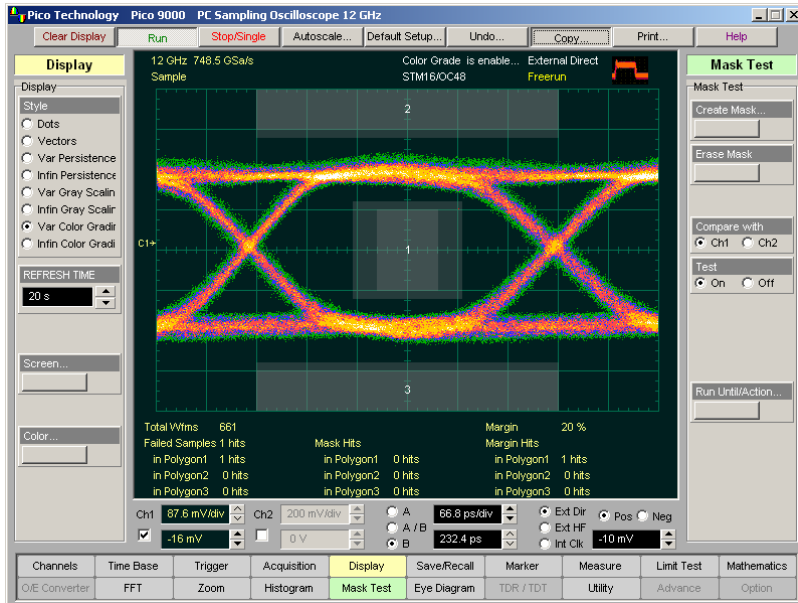

Mask test and 20% margin test performed for a standard 2.5 Gbps STM16/OC48 eye diagram


Mask test and 20% margin test performed for a standard 9.5 Gbps STM64/OC192 eye diagram

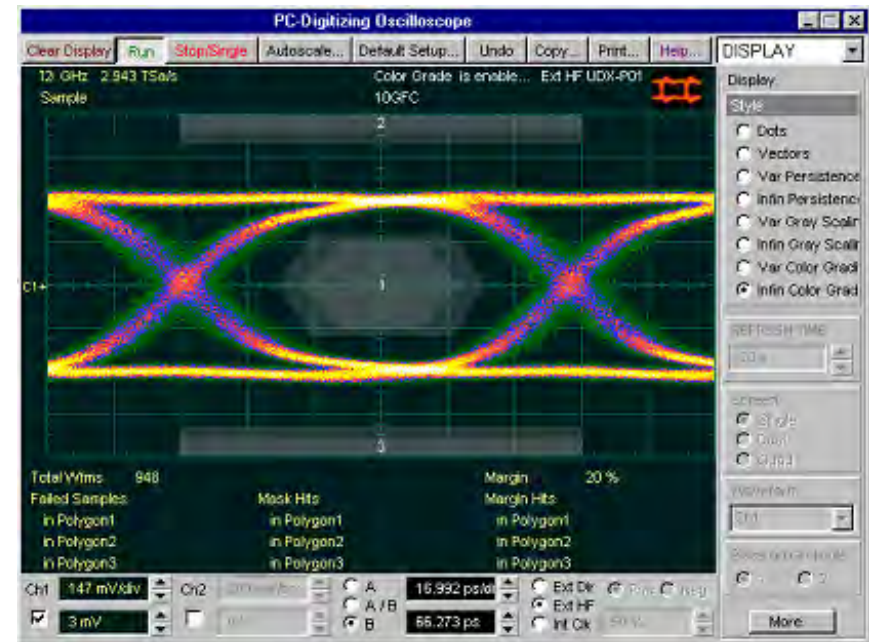

On-the-Fly Limit Testing

The PicoScope 9201 offers fully automatic pass-fail limit testing.

You can build a limit template from acquired waveforms or download a template from disk.

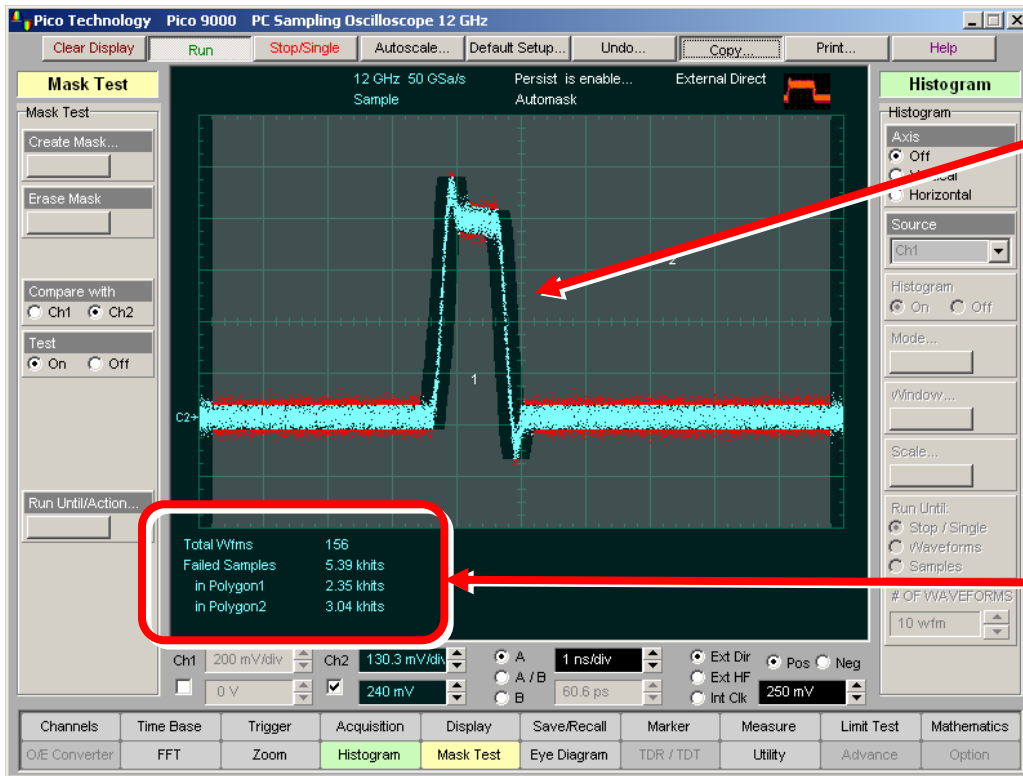

Using a reference waveform method (Automask), masks are constructed by adding a DELTA X and DELTA Y tolerance around a reference waveform. This method is simple to use, though not as flexible as the polygon method.

Mask test results show:

- ▶ Total waveforms
- ▶ Failed samples
- ▶ Hits in polygon

The PicoScope 9201's automatic, on-the-fly limit testing makes manufacturing pass-fail testing simple.

**Thank you for
watching!**